

 
 
# SEAT ADAPTER KIT #88326 INSTALLATION INSTRUCTIONS




5586-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

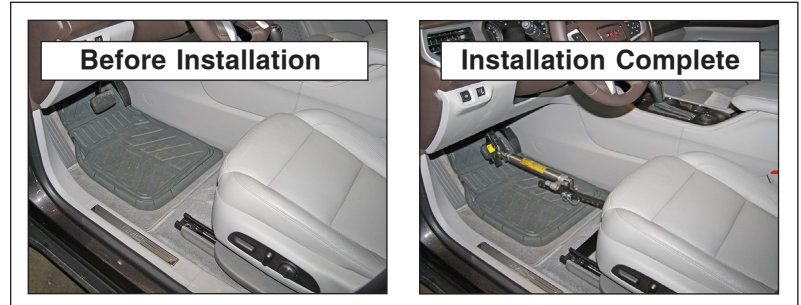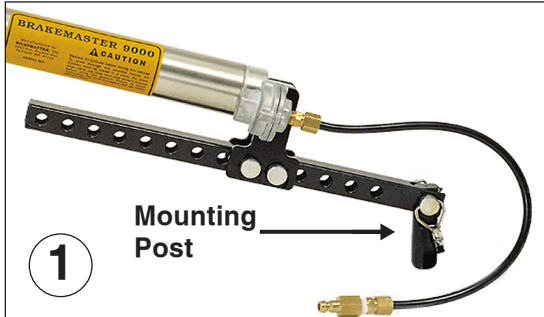

## Instructions

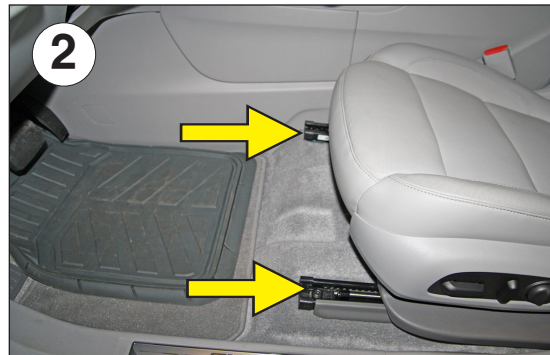 

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Push the seat all the way back and remove two T50 Torx bolts from the seat track (Fig.2).
3. Place the seat adapter under the seat tracks and then bolt down through the seat adapter and into the floor pan on each side using the T50 Torx bolts removed in the previous step (Fig.3). *Note:* you may need to loosen the two T50 rear seat track bolts in order to make this possible.  
  
*Note:* make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.



## WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.

### CAUTION

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.