



Time Tested • Time Proven

852471-03 12.23




part number 4400-102

## Installation Instructions

All specifications are subject to change without notice.

ROADMASTER, Inc. 6110 N.E. 127th Ave. Vancouver, WA 98682 800-669-9690 Fax 360-735-9300 www.roadmasterinc.com

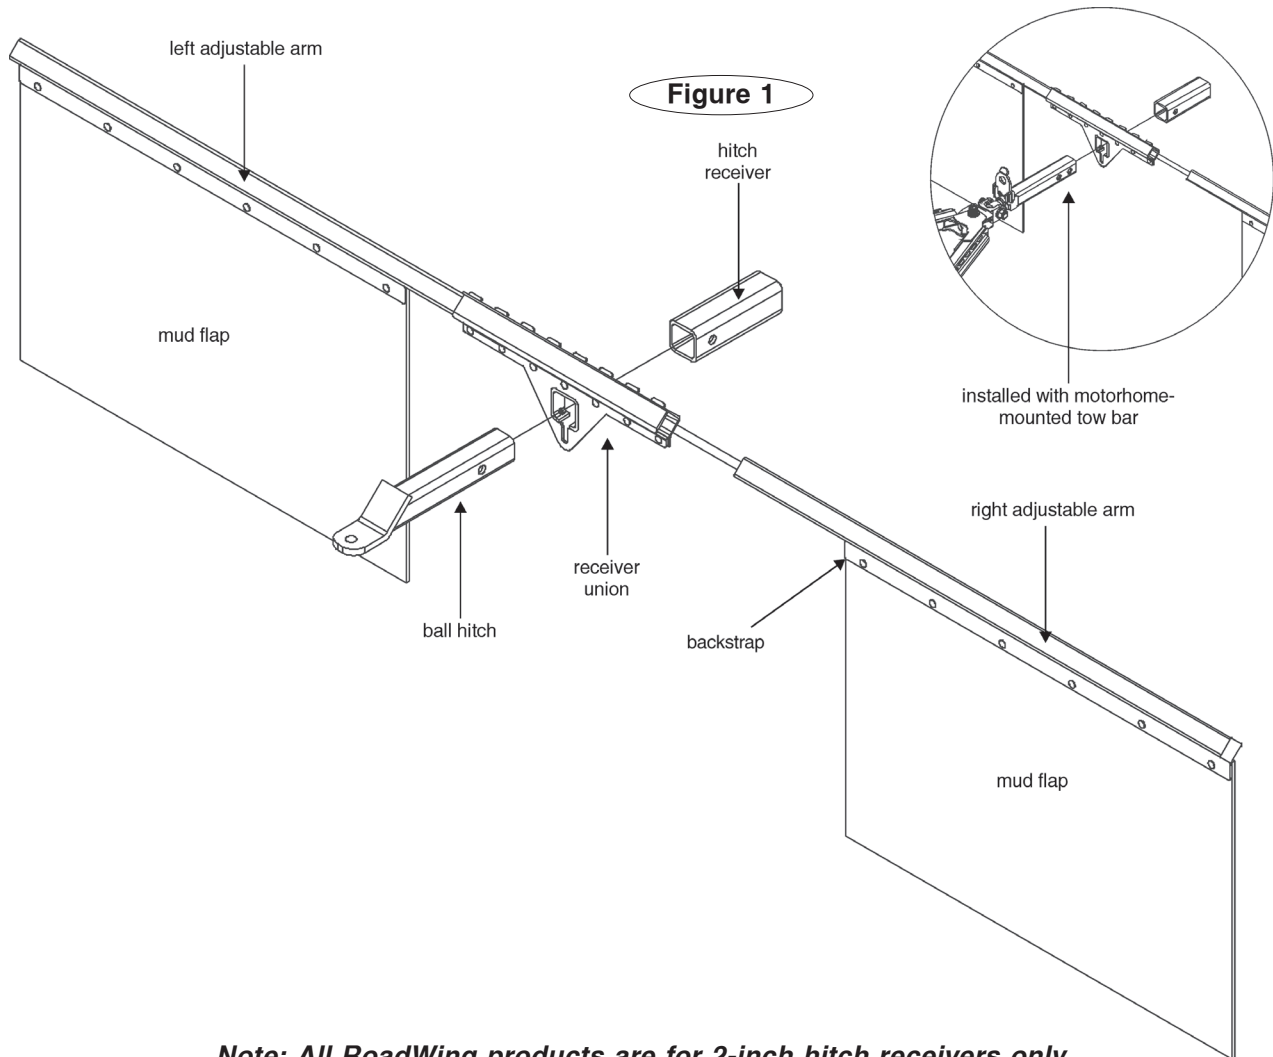

**Note: All RoadWing products are for 2-inch hitch receivers only.**

1. Remove the rubber flaps from the package, to allow them to unfurl. *Note: The flaps will unfurl more readily at a warm temperatures.*

2. Slide the left and right adjustable arms into the receiver union (Figure 1) and secure it using seven of the included 1/4" x 1" carriage bolts and 1/4" nyloc nuts. Leave the bolts finger tight for now.

2. Lift and position the RoadWing assembly onto the hitch receiver (Figure 1). Adjust the arms to the desired width and tighten all bolts to secure the adjustable arms.

3. With the vehicle parked on level ground, measure from the bottom of the square tubing to the ground. *Note: Roadmaster recommends attaching the trailer as its weight will change the overall height.*

4. If the flaps fit as is, proceed to step 5. Otherwise, use

a straight edge to mark a line across each flap and use a reciprocating saw (jigsaw, small sawzall, hack saw etc.) to cut the flaps to the desired height.

5. Use six of the 1/4" x 1" carriage bolts to attach each flap to an adjustable arm, bolting through the arm, the flap, and the back strap. Finish each carriage bolt with a 1/4" nyloc nut.

6. Tighten all carriage bolts. Then, tighten the set bolts.



### WARNING

**Inspect the bolts for tightness on a regular basis. Otherwise, the adjustable arms will fall out.**

**Failure to follow these instructions may cause property damage, personal injury or even death.**