



*Technical Service
Information Bulletin
November 19, 2014*

**Subject:
New tool bit required for
BrakeMaster Chrysler installations**


TSIB number 149

A special tool is required to remove the seat bolts on 2014 and 2015 Jeep Cherokees, Chrysler 200s and Dodge Darts. Later models of these vehicles, plus other vehicles within this family, may eventually be affected.

This tool is a screwdriver bit necessary to remove the MORTORQ seat track bolts, which Chrysler has used in place of the typical Torx bolts found on most vehicles.

This screwdriver bit is Snap-On part number PFMTS2E.

Since it could take some time to acquire this part, it may be beneficial to order one now from your Snap-On representative. Otherwise, BrakeMaster installation on these vehicles may take significantly longer than you would normally estimate.

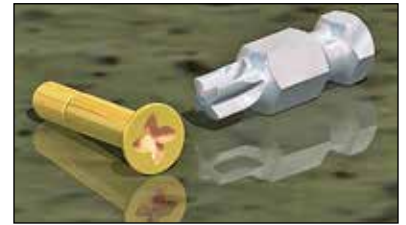

typical MORTORQ bolt and bit