


# SEAT ADAPTER KIT #88110 INSTALLATION INSTRUCTIONS



3131-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

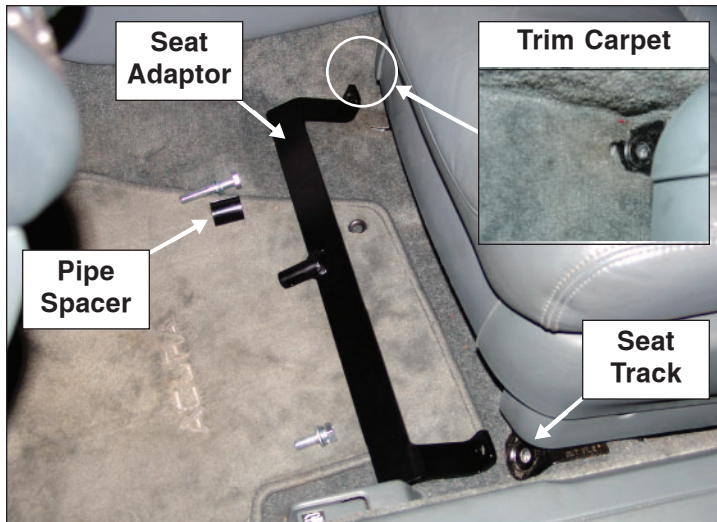

## Parts List

- (1) 1" x 1" pipe spacer, .220 oval
- (1) 10mm x 1.25 x 60mm bolt
- (1) 10mm x 1.25 x 30mm bolt
- (2) 10mm lock washers
- (2) 10mm flat washers

## Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove two 14mm (head) seat track mounting bolts (one on each side of the driver's seat). *Note:* trim two 3/4" strips around the passenger side seat track (inset, Fig.1), in order to gain access to the passenger side seat track mounting bolt. Position the seat adaptor over the seat track, so that the pre-drilled holes at each end of the seat track are directly over the holes for the seat track mounting bolts you just removed. Attach the seat adaptor to the passenger side first – position the supplied 1" x 1" (.220 wall) pipe spacer between the seat track and the seat adaptor, and bolt through with a 10mm x 1.25 x 60mm bolt, lock washer and nut. Finger-tighten only at this time. Now, attach the seat adaptor to the driver's side seat track – bolt through with the supplied 10mm x 1.25 x 30mm bolt, lock washer and nut. Tighten both bolts.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.