




SEAT ADAPTER KIT #88111 INSTALLATION INSTRUCTIONS



3132-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

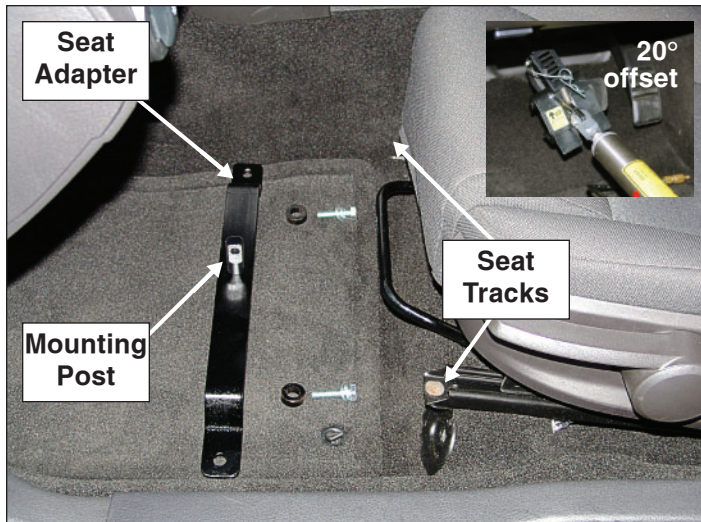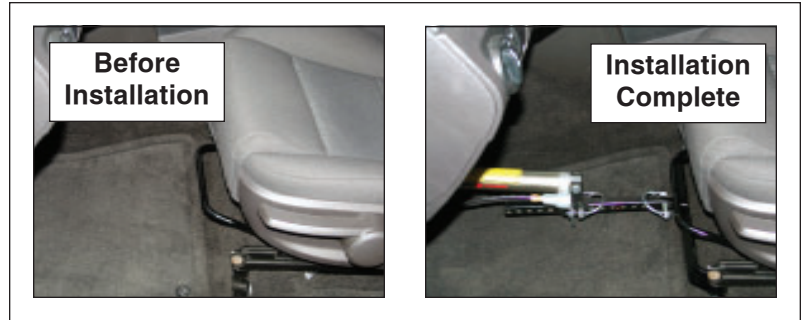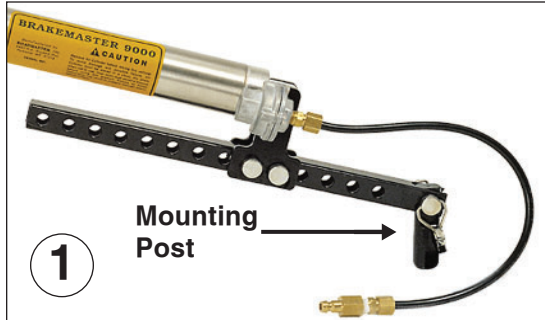

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.5 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1" x 3/8" spacers, .188 wall

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the two 13mm (head) seat track mounting bolts (one on each side of the driver's seat) holding the seat track to the floor. Position the seat adapter over the top of the seat tracks, so that the pre-drilled holes at each end are over the holes for the seat track bolts you just removed. Then position the 1" x 3/8" spacers between the seat tracks and the seat adapter. Bolt the adapter into place, using a 10mm x 1.5 x 40mm bolt, lock washer and flat washer on each end. Note: the BrakeMaster pedal clamp mounts over the brake pedal at approximately 20 degrees offset when properly installed (See the inset photo in Figure 2.).



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.