



SEAT ADAPTOR KIT #88111 INSTALLATION INSTRUCTIONS



3132-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

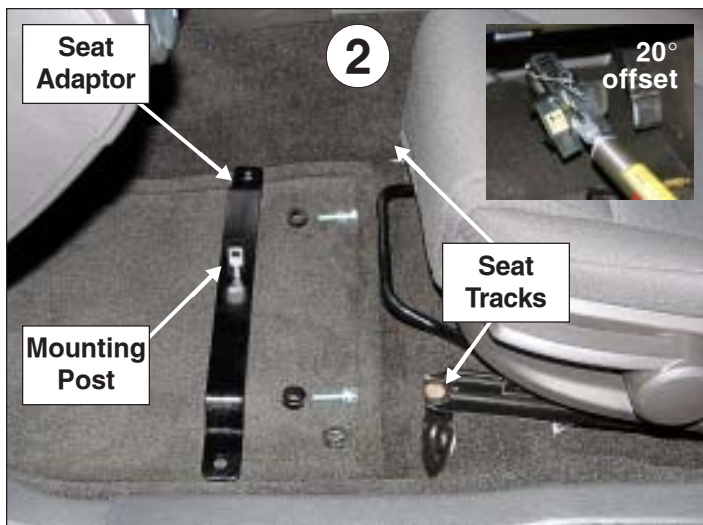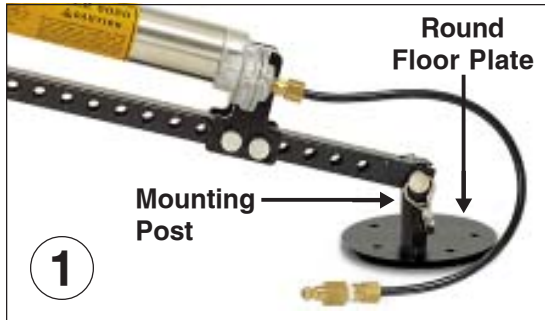

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.5 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1" x 3/8" spacers, .220 wall

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two 13mm (head) seat track mounting bolts (one on each side of the driver's seat) holding the seat track to the floor. Position the seat adaptor over the top of the seat tracks, so that the pre-drilled holes at each end are over the holes for the seat track bolts you just removed. Then position the 1" x 3/8" spacers between the seat tracks and the seat adaptor. Bolt the adaptor into place, using a 10mm x 1.5 x 40mm bolt, lock washer and flat washer on each end. Note: the BrakeMaster pedal clamp mounts over the brake pedal at approximately 20 degrees offset when properly installed (See the inset photo in Figure 2.).



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.