

SEAT ADAPTER KIT #88112 INSTALLATION INSTRUCTIONS

6110 NE 127th Ave.



www.roadmasterinc.com

3607-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

360-896-0407

fax 360-735-9300

ROADMASTER, Inc. Vancouver, WA 98682








- 1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit. Now, remove the two T50 Torx bolts at the rear of the driver seat, holding the driver's seat to the seat track (Fig.1).
 - 2. Push the driver's seat completely back (Fig.2) and then up, to gain access to the air bag plug under the driver's seat.
 - 3. Pull back on the orange lock tab on the air bag plug (Fig.3). Then, push down on the release tab to unplug it.



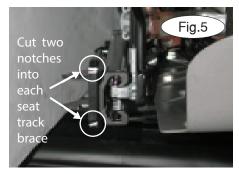




- 4. To protect the dash and forward components of the vehicle from scratches or tears, slide a sheet of heavy cardboard or other material against the dashboard (Fig.4). Lift the steering wheel to its highest point. Then, lift and rotate the driver's seat so that the forward seat track supports extend out of the driver's side door (Fig.4).
- 5. The seat adapter will slide directly under the seat track supports. On each side of the driver's seat, use a cut-off wheel to cut two notches into the braces under the seat track supports, so that the forward edge of each brace can be pried up and out of the way of the seat adapter (Fig. 5 and Fig.6).


In addition to the two notches, trim away a section of the passenger side brace. Use the white marker line in Figure 6 as a reference. Figure 7 shows the passenger side brace trimmed.

- Now that you have cut the two notches in each brace, pry up each edge with a pair of pliers so that each edge is flush with the top of the brace (Fig.7).
- 7. Slide the adapter into place, around the seat track hooks on each side of the driver's seat (Fig.8).

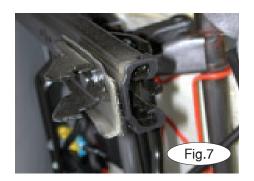







SEAT ADAPTER KIT #88112 INSTALLATION INSTRUCTIONS



3607-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

- 8. Swing the driver's seat back into the vehicle, and reattach the air bag plug that you disconnected in step 3.
- 9. Position the driver's seat over the seat track make certain that the seat track hooks fit securely back into the seat track grooves.
- 10. Reattach the two T50 Torx bolts, at the rear of the driver seat, that you removed in step 1. Attach the air cylinder to the mounting post and brake pedal (Fig.9).

