

1-800-669-9690




SEAT ADAPTER KIT #88113 INSTALLATION INSTRUCTIONS



3133-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

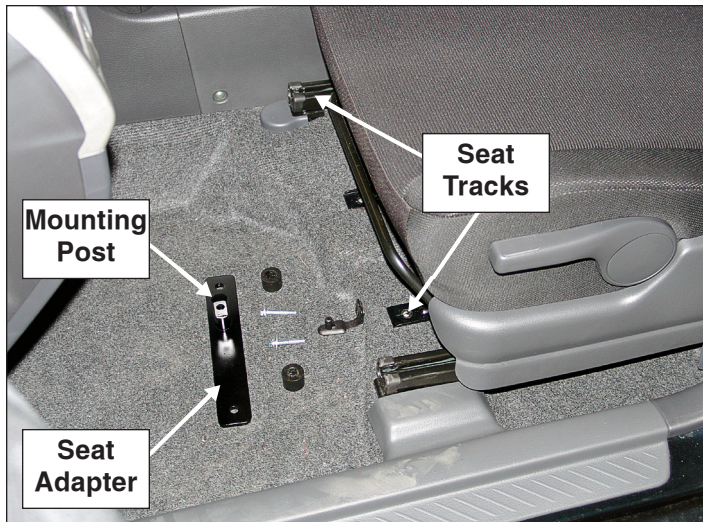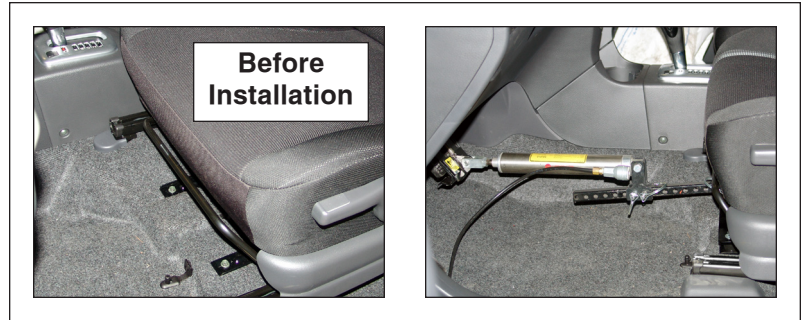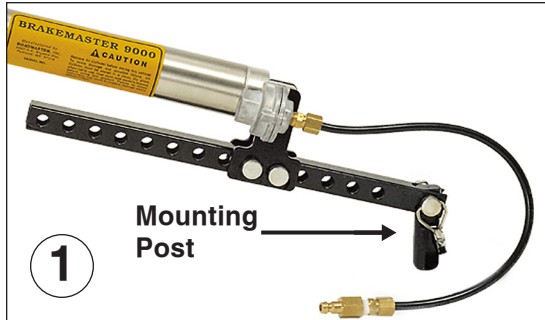

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 1" x 3/4" spacers, .219 wall
- (2) 6mm x 1.0 x 40mm bolts
- (2) 6mm flat washers
- (2) 6mm lock washers
- (1) Allen head bolt

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the two 10mm (head) seat track mounting bolts (one on each side of the driver's seat) holding the seat track to the floor. Position the seat adapter over the top of the seat tracks, so that the pre-drilled holes at each end are over the holes for the seat track bolts you just removed. Then position the 1" x 3/4" spacers between the seat tracks and the seat adapter. Bolt the adapter into place, using a 6mm x 1.0 x 40mm bolt, flat washer and lock washer on each end.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.