

# SEAT ADAPTOR KIT #88113 INSTALLATION INSTRUCTIONS



3133-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

1-800-669-9690

www.roadmasterinc.com

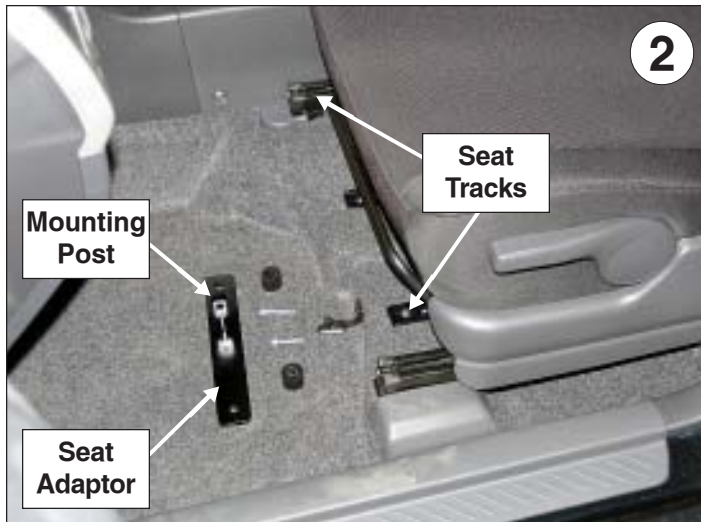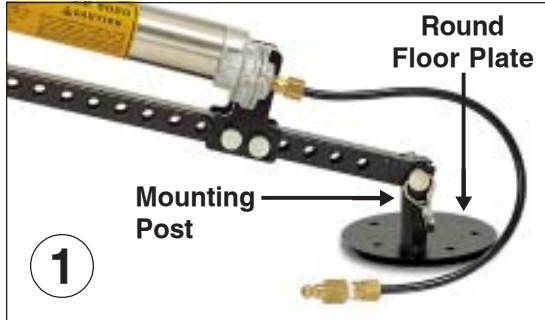

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 1" x 3/4" spacers, .219 wall
- (2) 6mm x 1.0 x 40mm bolts
- (2) 6mm flat washers
- (2) 6mm lock washers

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two 10mm (head) seat track mounting bolts (one on each side of the driver's seat) holding the seat track to the floor. Position the seat adaptor over the top of the seat tracks, so that the pre-drilled holes at each end are over the holes for the seat track bolts you just removed. Then position the 1" x 3/4" spacers between the seat tracks and the seat adaptor. Bolt the adaptor into place, using a 6mm x 1.0 x 40mm bolt, flat washer and lock washer on each end.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.