


SEAT ADAPTOR KIT #88116 INSTALLATION INSTRUCTIONS



2946-02


ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

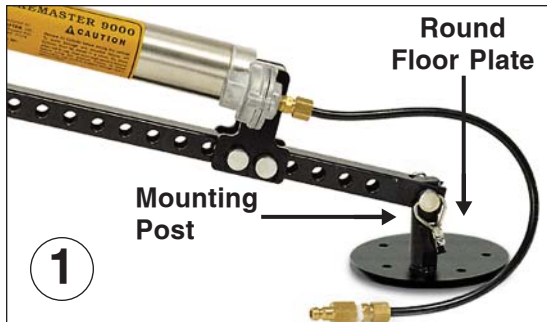

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 3/8" x 1" spacers (optional)

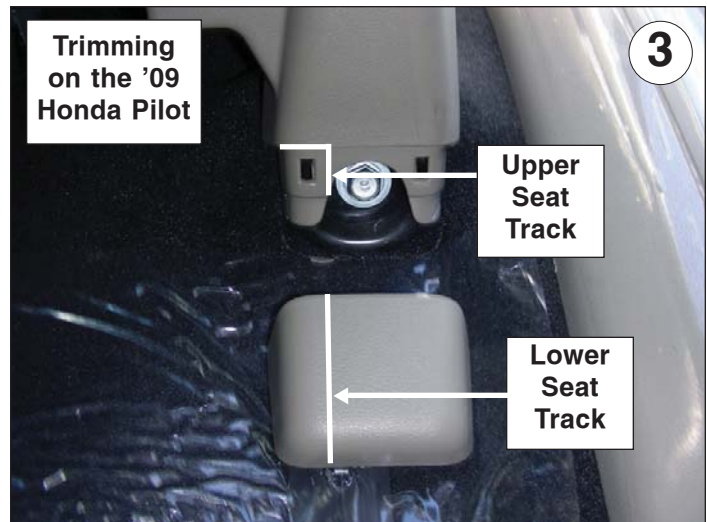

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Snap off the plastic seat track covers on each side of the driver's seat and remove the two front seat mounting bolts (one on each side). *Note:* on the '09 Honda Pilot, trim the upper seat track cover as shown in Figure 3. Set the seat adaptor in place over the front seat mounting bolt holes, and bolt it in place to the seat rail, using a 10mm x 1.25 x 35mm bolt, lock washer and flat washer on each side. *Note:* some applications may require the supplied 3/8" x 1" spacers between the seat adaptor and seat tracks.

3. Trim the plastic seat track covers for the Honda Odyssey (inset, Figure 2) so that they will fit over the seat adaptor, and snap them back in place. Figure 3 shows the lower seat track cover trimming on the '09 Honda Pilot.

