



SEAT ADAPTOR KIT #88119 INSTALLATION INSTRUCTIONS



3130-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

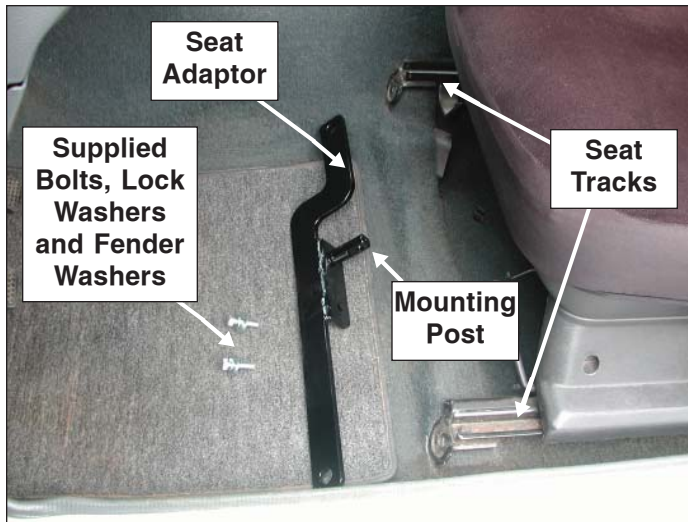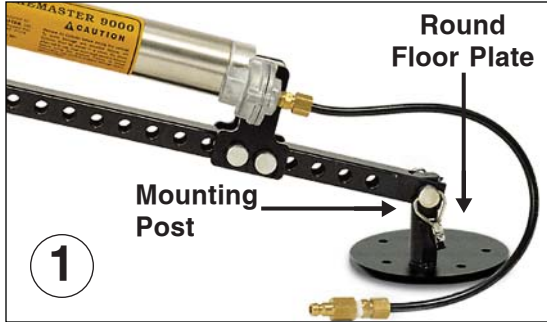

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 8mm x 1.0 x 30mm bolts
- (2) 8mm lock washers
- (2) 8mm fender washers

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. There are two holes in the seat adaptor. Test-fit the adaptor against the seat tracks, and choose the hole that aligns most directly to the brake pedal. Then, secure the mounting post to the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Remove the plastic seat track covers on each side of the driver's seat, and then the two 12mm (head) bolts holding the seat tracks to the floor (one on each side). Align the seat adaptor over the seat tracks, and bolt it directly into the holes for the 12mm bolts you just removed. Replace the plastic seat track covers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.