



1-800-669-9690




SEAT ADAPTOR KIT #88121 INSTALLATION INSTRUCTIONS



3150-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

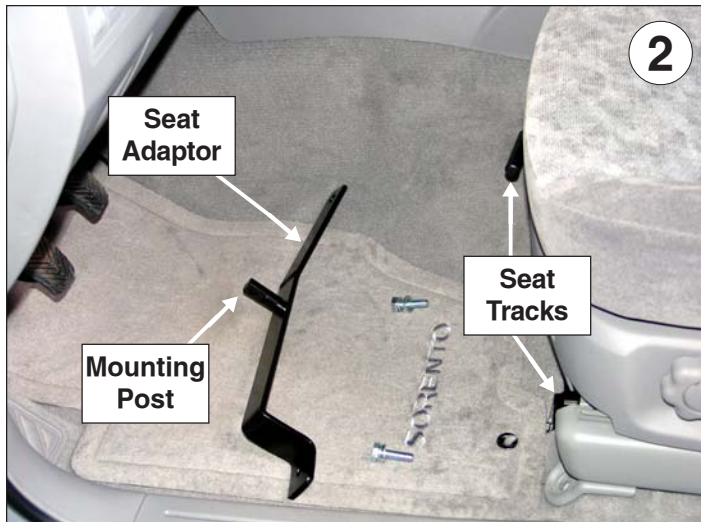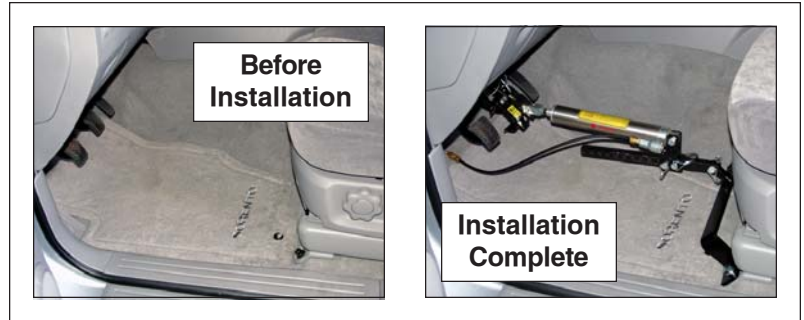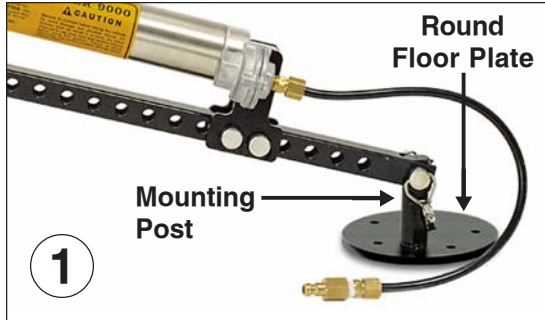

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two 14mm front seat mounting bolts (one on each side of the driver's seat). Set the seat adaptor in place over the holes for the bolts you just removed. Secure the seat adaptor in place with the supplied 10mm x 1.25 x 35mm bolts, 10mm flat washers and lock washers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.