




# SEAT ADAPTER KIT #88121 INSTALLATION INSTRUCTIONS



3150-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

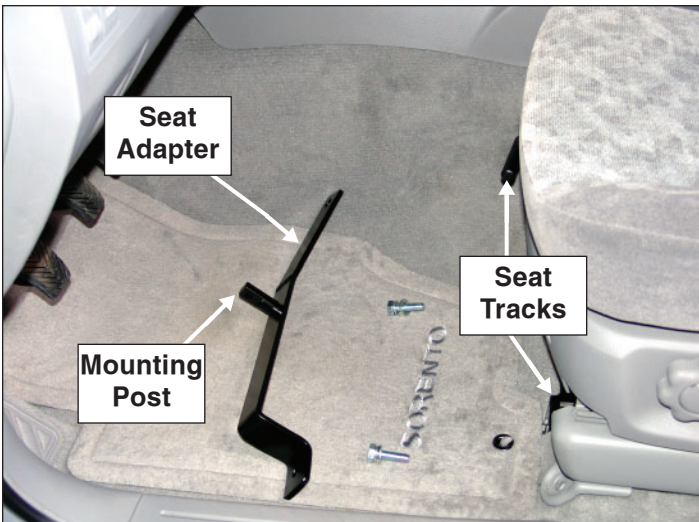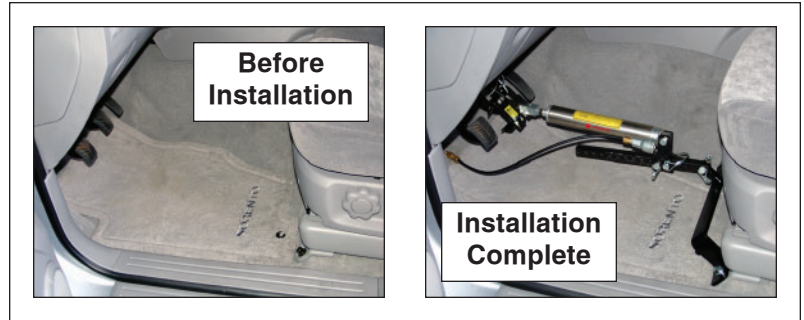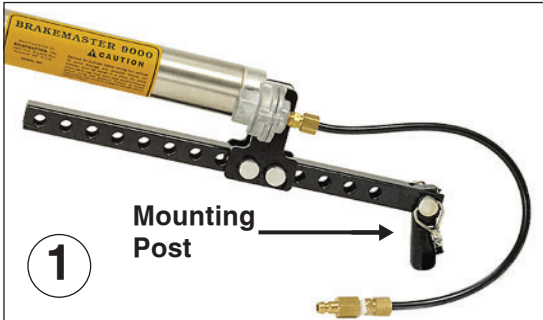

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

## Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the two 14mm front seat mounting bolts (one on each side of the driver's seat). Set the seat adapter in place over the holes for the bolts you just removed. Secure the seat adapter in place with the supplied 10mm x 1.25 x 35mm bolts, 10mm flat washers and lock washers.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.