




# SEAT ADAPTOR KIT #88122 INSTALLATION INSTRUCTIONS



3164-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

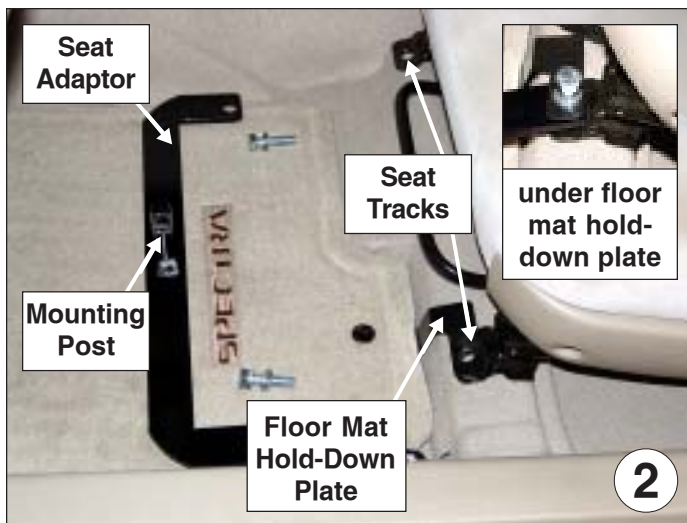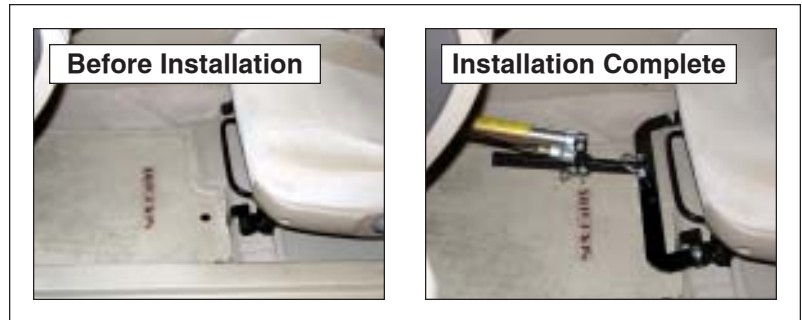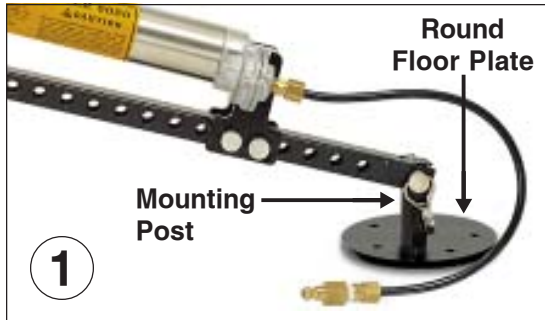

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove and discard the two 14mm (head) front seat mounting bolts (one on each side of the driver's seat) from the seat tracks. Position the seat adaptor over the seat tracks, so that the pre-drilled holes at each end of the adaptor align to the holes for the bolts you just removed. Note: the adaptor fits **under** the floor mat hold-down plate (inset, Figure 2), on the driver's side, and above the seat track. Bolt the seat adaptor in place by replacing the factory seat track bolts with the supplied 10mm x 1.25 40mm bolts, 10mm lock washers and 10mm flat washers.



### WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.