




SEAT ADAPTER KIT #88122 INSTALLATION INSTRUCTIONS



3164-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

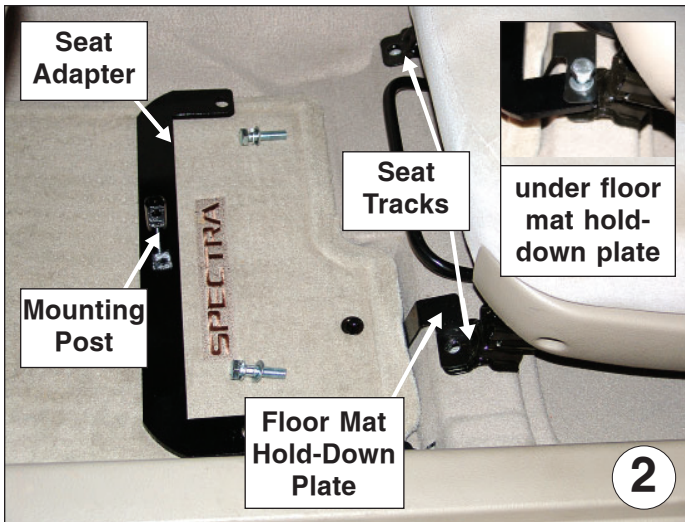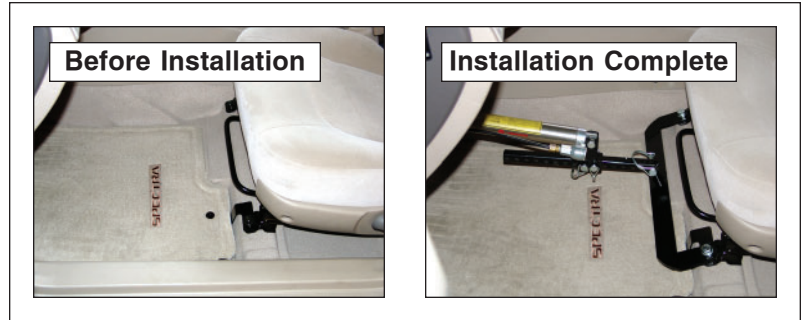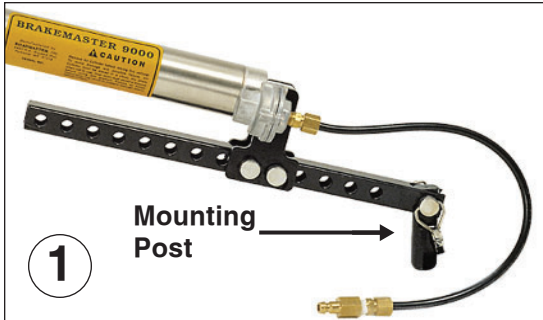

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

Instructions

- 1.** Secure the mounting post (Fig.1) to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adapter has a countersunk hole, you must use the Allen head bolt and lock washer included with this kit.
- 2.** Remove and discard the two 14mm (head) front seat mounting bolts (one on each side of the driver's seat) from the seat tracks. Position the seat adapter over the seat tracks, so that the pre-drilled holes at each end of the adapter align to the holes for the bolts you just removed. Note: the adapter fits **under** the floor mat hold-down plate (inset, Figure 2), on the driver's side, and above the seat track. Bolt the seat adapter in place by replacing the factory seat track bolts with the supplied 10mm x 1.25 40mm bolts, 10mm lock washers and 10mm flat washers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.