



SEAT ADAPTOR KIT #88123 INSTALLATION INSTRUCTIONS



Part# 3165-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

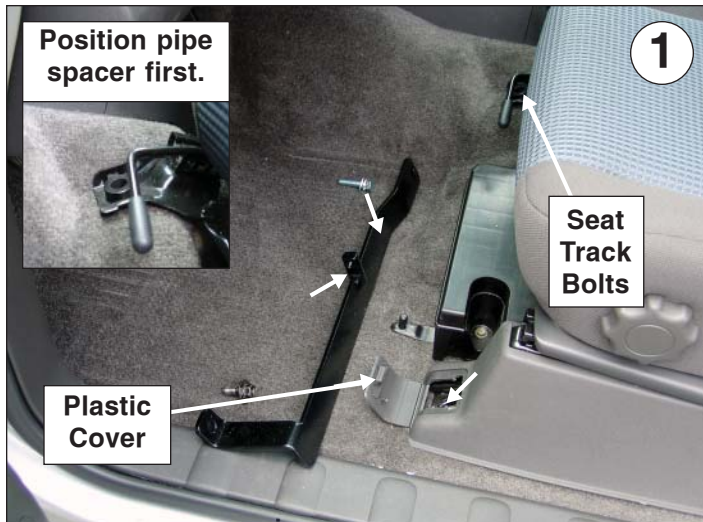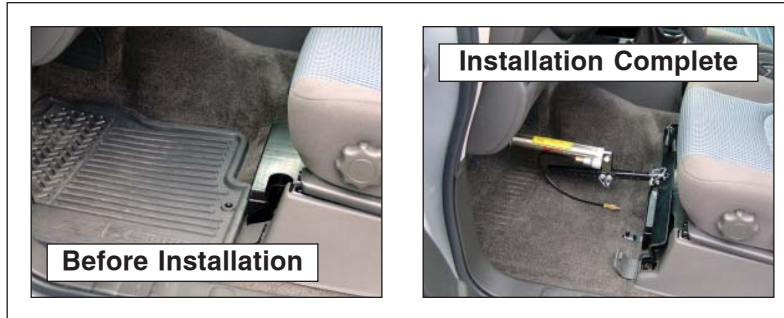

Parts List

- (1) 10mm x 1.25 x 40mm bolt
- (2) 10mm lock washer
- (1) 10mm flat washer
- (1) 1" x 3/8" pipe spacer, .219 wall
- (1) 10mm x 1.25 x 35mm bolt

Instructions

- 1.** Remove the two 14mm (head) bolts attaching the seat track to the floor (First, snap open the plastic seat track cover over the driver's side bolt; the passenger's side bolt is not covered.)
- 2.** Align the two pre-drilled holes at each end of the seat adaptor over the holes for the bolts you just removed.
- 3.** Attach the seat adaptor to the driver's side with the 10mm x 1.25 x 35mm bolt and 10mm lock washer. For the passenger side, first position the supplied 1" x 3/8" pipe spacer over the seat track bolt hole (inset, Figure 1). Then, bolt the passenger side of the adaptor into place with the supplied 10mm x 1.25 x 40mm bolt, lock washer and flat washer. (Note: the plastic seat track cover on the driver's side may be trimmed or left open).
- 4.** Attach the BrakeMaster to the mounting post and brake pedal, following the instructions in the owner's manual.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.