


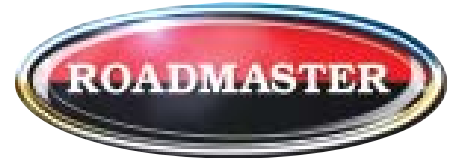

1-800-669-9690

# SEAT ADAPTOR KIT #88123 INSTALLATION INSTRUCTIONS



Part# 3165-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

1-800-669-9690

www.roadmasterinc.com

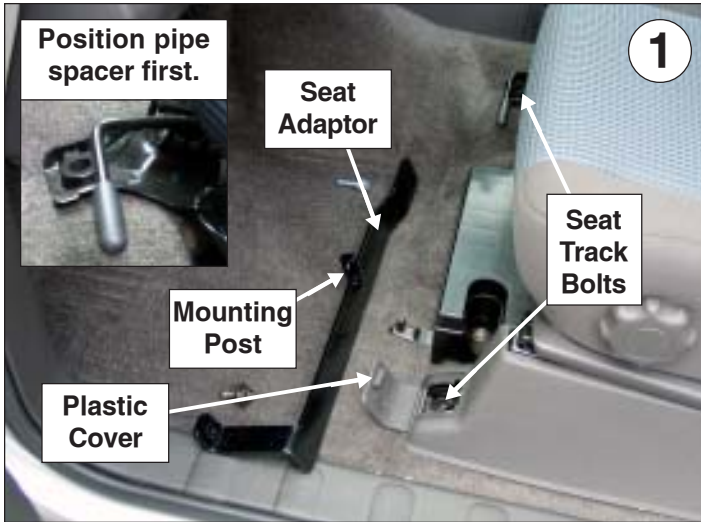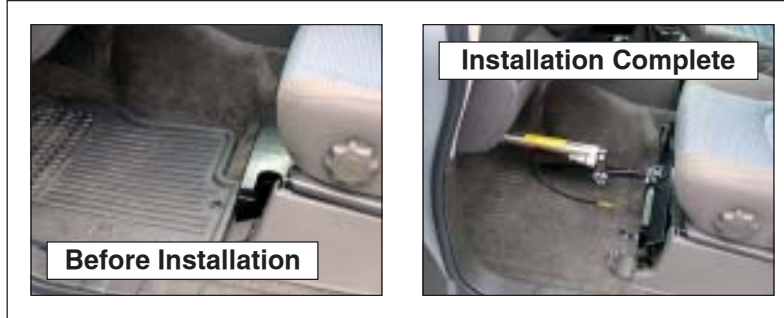

## Parts List

- (1) 10mm x 1.25 x 40mm bolt
- (2) 10mm lock washer
- (1) 10mm flat washer
- (1) 1" x 3/8" pipe spacer, .219 wall
- (1) 10mm x 1.25 x 35mm bolt

## Instructions

- 1.** Remove the two 14mm (head) bolts attaching the seat track to the floor (First, snap open the plastic seat track cover over the driver's side bolt; the passenger's side bolt is not covered.)
- 2.** Align the two pre-drilled holes at each end of the seat adaptor over the holes for the bolts you just removed.
- 3.** Attach the seat adaptor to the driver's side with the 10mm x 1.25 x 35mm bolt and 10mm lock washer. For the passenger side, first position the supplied 1" x 3/8" pipe spacer over the seat track bolt hole (inset, Figure 1). Then, bolt the passenger side of the adaptor into place with the supplied 10mm x 1.25 x 40mm bolt, lock washer and flat washer. (*Note:* the plastic seat track cover on the driver's side may be trimmed or left open).
- 4.** Attach the BrakeMaster to the mounting post and brake pedal, following the instructions in the owner's manual.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.