



SEAT ADAPTOR KIT #88126 INSTALLATION INSTRUCTIONS



3392-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

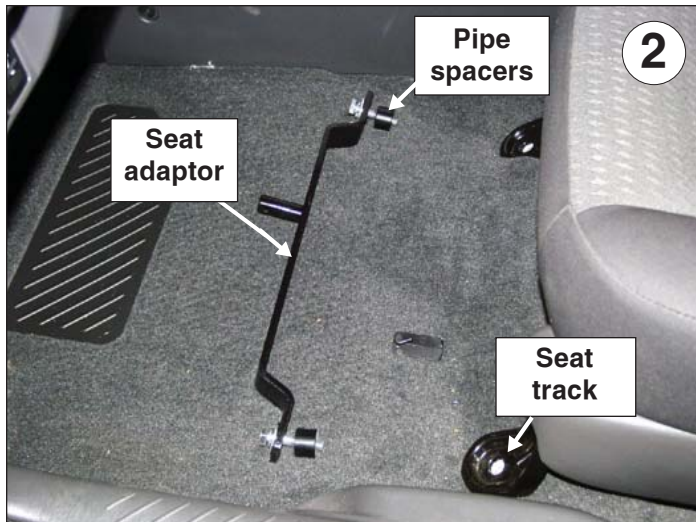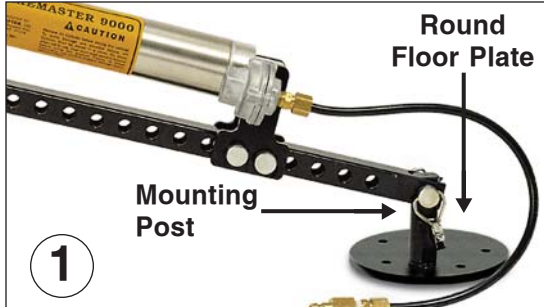

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the 3/8" x 3/4" bolt you removed from the round plate and the supplied 3/8" lock washer.

Parts List

- (2) 10mm x 1.5 x 50mm bolts
- (2) 10mm fender washers
- (2) 10mm lock washers
- (2) 1 x 3/4" x .219 wall pipe spacer
- (1) 3/8" lock washer

2. The mounting post is slightly offset, to align with the brake pedal. Check the alignment of the mounting post to the brake pedal. Now, remove the two 15mm (head) front seat mounting bolts (one on each side). Bolt the seat adaptor in place using one of the supplied 1" x 3/4" x .219 wall pipe spacers (placed between the seat track mount and the seat adaptor), 10mm bolts, fender washers and lock washers, on each side. Tighten both bolts.

! WARNING Failure to follow these instructions can result in property damage, personal injury or even death.