



SEAT ADAPTER KIT #88126 INSTALLATION INSTRUCTIONS



3392-05

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

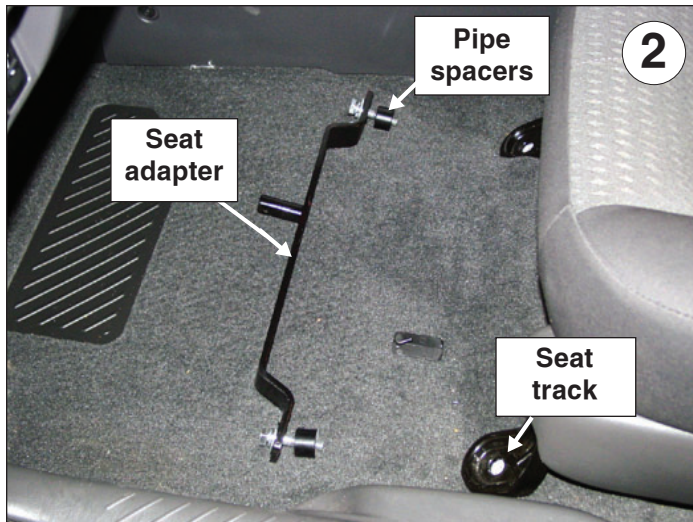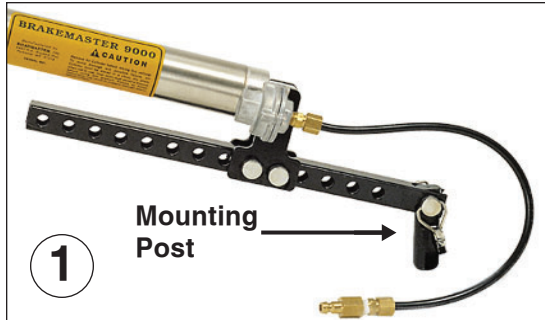

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. The mounting post is slightly offset, to align with the brake pedal. Check the alignment of the mounting post to the brake pedal. Now, remove the two 15mm (head) front seat mounting bolts (one on each side). Bolt the seat adapter in place using one of the supplied 1" x 3/4" x .219 wall pipe spacers (placed between the seat track mount and the seat adapter), 10mm bolts, fender washers and lock washers, on each side. Tighten both bolts.

Parts List

- (2) 10mm x 1.5 x 50mm bolts
- (2) 10mm fender washers
- (2) 10mm lock washers
- (2) 1 x 3/4" x .219 wall pipe spacer
- (1) 3/8" lock washer
- (1) Allen head bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.