



1-800-669-9690



SEAT ADAPTOR KIT #88127 INSTALLATION INSTRUCTIONS



3341-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

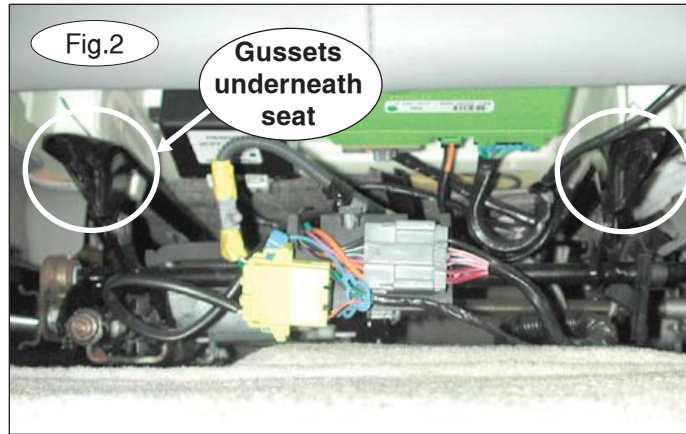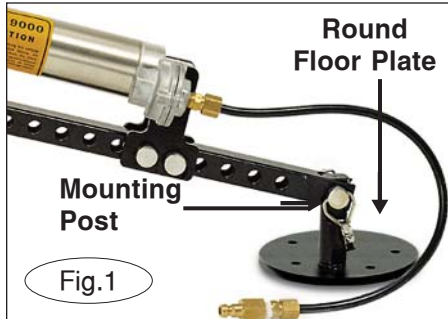

Parts List

- (2) 3/4" x 5/8" spacers
- (2) 5/16" x 1 1/2" bolts
- (2) 5/16" nylock nuts
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 8mm nuts
- (2) 8mm x 1.25 x 20mm bolts

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Hold the seat adaptor up to the gussets (Fig.2) Using the pre-drilled holes in the seat adaptor as a template, mark the hole for drilling (Fig.3), on both sides.

WARNING

Seat and/or pedal positioning systems may affect the towed vehicle braking system. Determine if the vehicle to be towed is equipped with pedal presets and/or automatic seat adjustments. Proper installation of the braking system may be affected by these presets; if the vehicle is so equipped, note the original installed position and return to that position before towing the vehicle. If the seat and/or brake pedal are not at the original installed position when the vehicle is towed, the brake pedal may apply unnecessary braking force, which will damage the brake system and/or electrical system failure or other non-warranty damage. Failure to follow these instructions may result in property damage, personal injury or even death.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

SEAT ADAPTOR KIT #88127 INSTALLATION INSTRUCTIONS




3341-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com



Fig.4

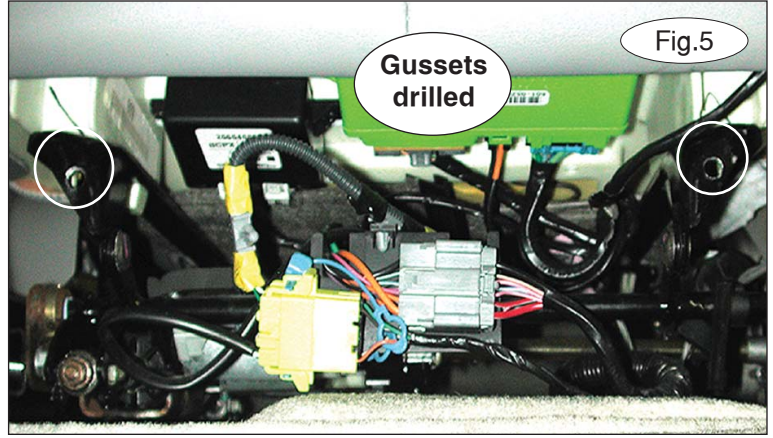

Gussets drilled

Fig.5

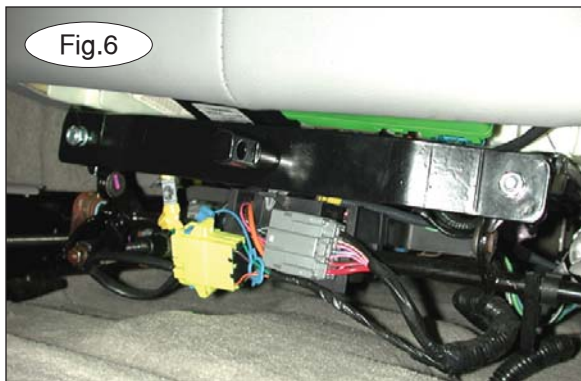


Fig.6

3. Once the holes are marked, drill a 11/32" hole into both gussets (Fig.4).


4. Now, place the spacers between the gussets and the seat adaptor. Bolt from behind and mount the lock washers and nuts in the front (Fig.6). Bolt the adaptor into place through the drilled holes (Fig.5) using the supplied 5/16" x 1 1/2" bolts and 5/16" nuts.

5. Attach the BrakeMaster to the mounting post and brake pedal, following the instructions in the owner's manual (Fig.7).



Fig.7

Installation Complete

 **WARNING** Failure to follow these instructions can result in property damage, personal injury or even death.