




SEAT ADAPTER KIT #88129 INSTALLATION INSTRUCTIONS



3406-05

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

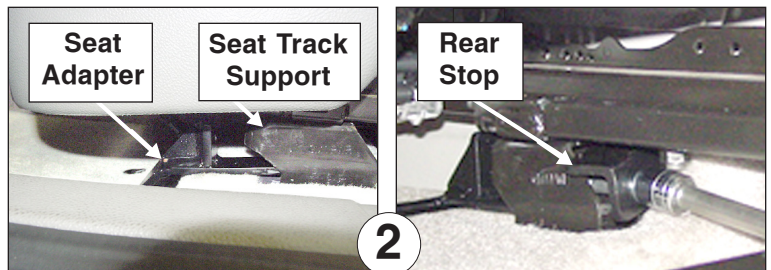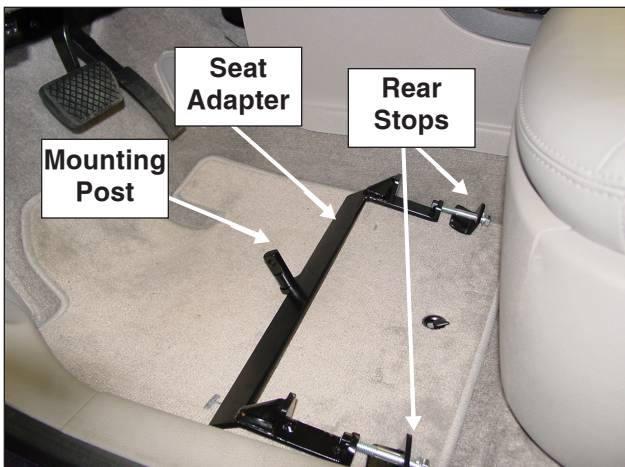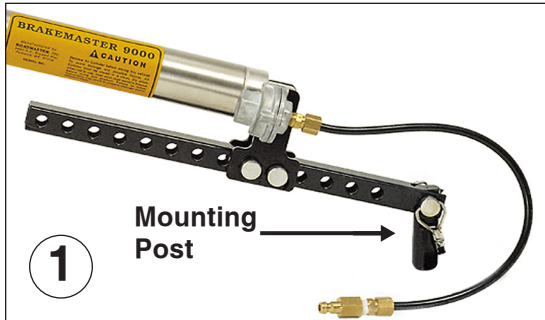

- ### Parts List
- (3) 3/8" lock washers
 - (1) 3/8" x 3/4" bolt
 - (2) 3/8" x 2 3/4" bolts

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Raise the seat all the way up and back. Slide the seat adapter through the opening in the seat track support. Position the rear stops over the rear openings in the seat support. Slide the 3/8" x 2 3/4" bolts and lock washers through the stops and thread into the nuts (Figure 2).

continued on next page



1-800-669-9690

SEAT ADAPTER KIT #88129 INSTALLATION INSTRUCTIONS



3406-05

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

continued from preceding page

3. Use Figure 3 as a guide for the proper angle of the bracket before it is bolted down. *Note:* tighten the bolts from the rear seat.

4. Mount the air cylinder as shown in Figure 4.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.