


## SEAT ADAPTER KIT #88134 INSTALLATION INSTRUCTIONS



3727-04


ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

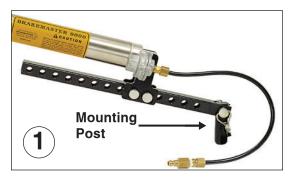






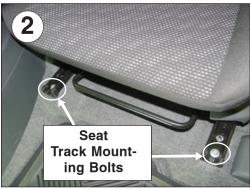



- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (1) Allen head bolt

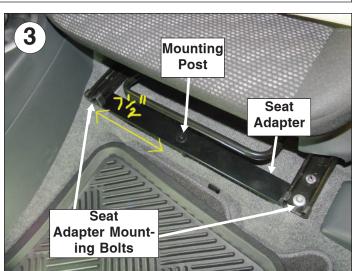

## Instructions

- **1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x <sup>3</sup>/<sub>4</sub>" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2. Remove the two E10 Torx (6.8mm socket) seat track mounting bolts.
- **3.** Now, place the seat adapter between the floor and the seat tracks with the mounting post pointing towards the floor. *Note:* the side that measures  $7\frac{1}{2}$  from the end to the mounting post goes towards the passenger side. Bolt the seat adapter into place on each side with the bolts you removed in step 2.