



SEAT ADAPTER KIT #88135 INSTALLATION INSTRUCTIONS



3731-02


ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

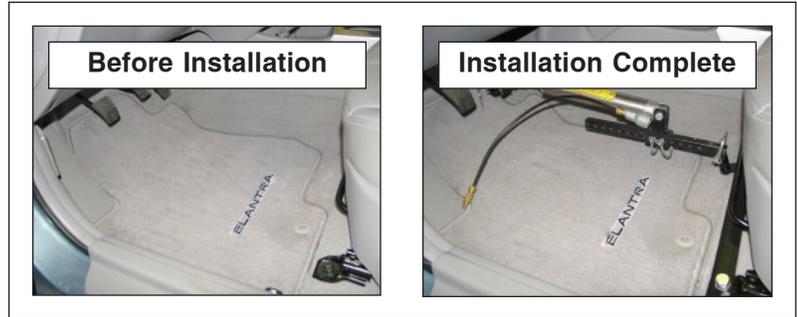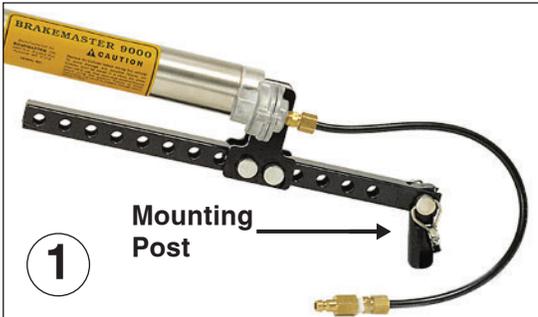

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.5 x 35mm
- (2) 10mm flat washers
- (2) 10mm lock washers

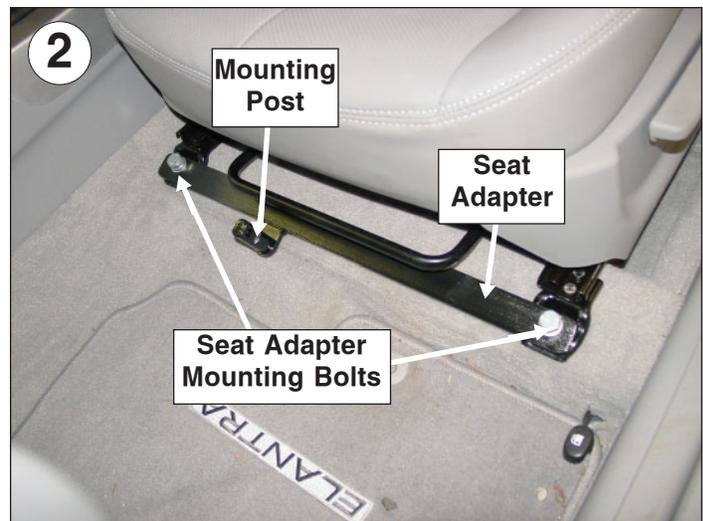

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the two 13mm (head) seat track mounting bolts. Now, place the seat adapter over the holes you removed the 13mm (head) bolts from and bolt into place using the 10mm x 1.5 x 35mm bolts, lock washers and flat washers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.