



1-800-669-9690





SEAT ADAPTOR KIT #88136 INSTALLATION INSTRUCTIONS



Part# 3751

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

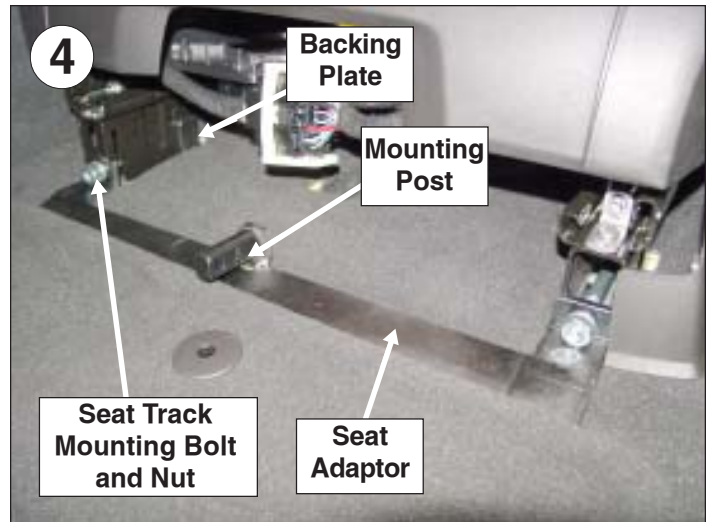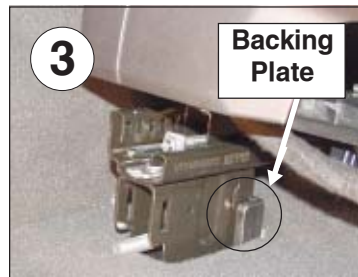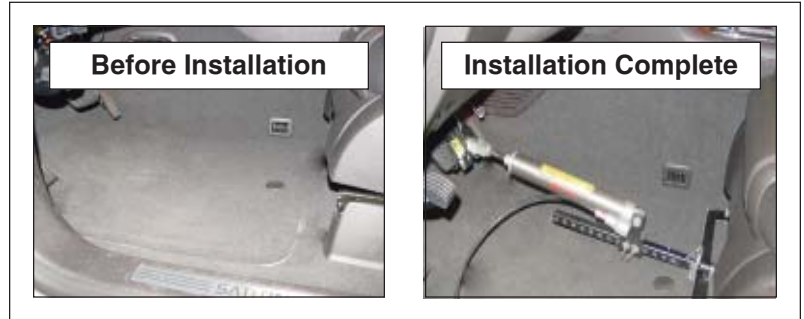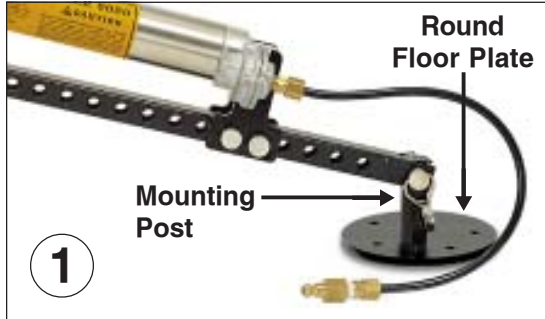

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 3/8" x 4 1/2" bolt
- (2) 3/8" nyloc nut

Instructions

- 1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
- 2.** Unsnap the seat track cover from the left side of the driver's seat by pulling out on it.
- 3.** Now, hook the backing plates over the rear of the seat pedestal (with the hook facing toward the inside of the seat), refer to picture 3 and 4 for correct placement. Next, place the 3/8" x 4 1/2" bolt through the backing plate and the seat pedestal.
- 4.** Place the seat adaptor over the bolts and finish with the supplied 3/8" nyloc nuts.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.