





SEAT ADAPTER KIT #88136 INSTALLATION INSTRUCTIONS



3751-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

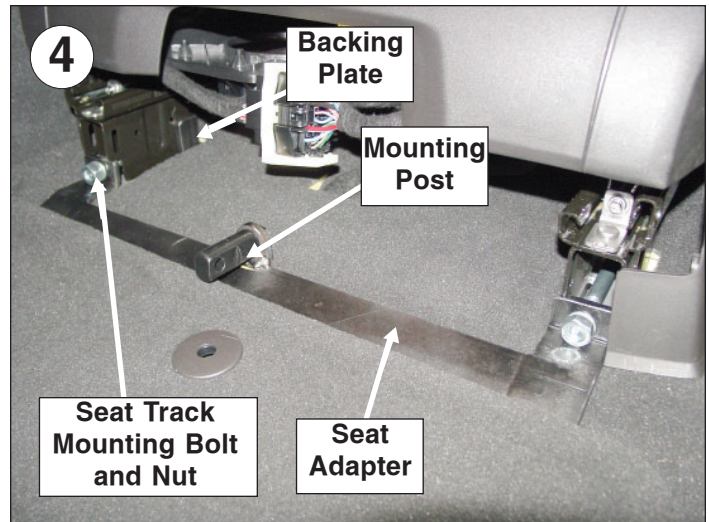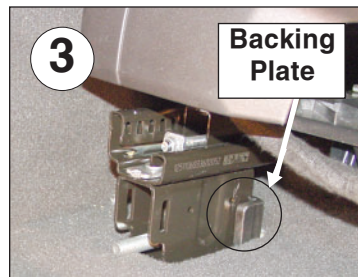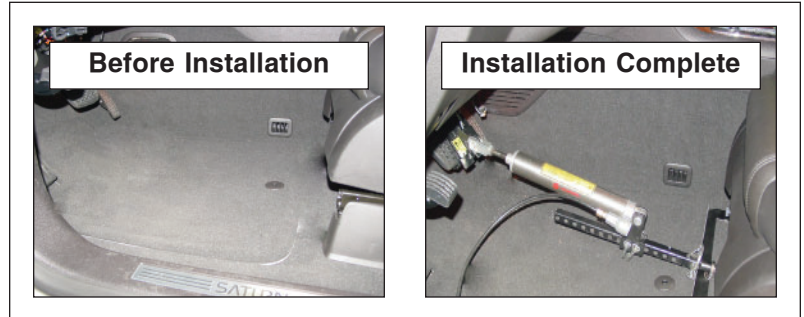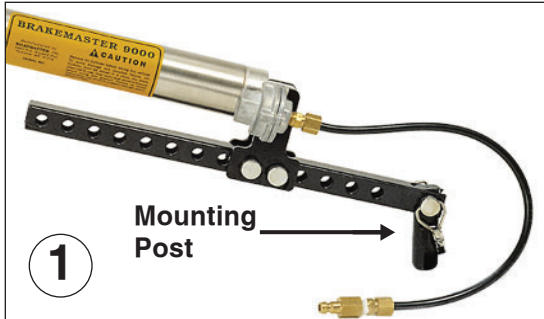

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 3/8" x 4 1/2" bolt
- (2) 3/8" nyloc nut

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Unsnap the seat track cover from the left side of the driver's seat by pulling out on it.
- 3.** Now, hook the backing plates over the rear of the seat pedestal (with the hook facing toward the inside of the seat), refer to picture 3 and 4 for correct placement. Next, place the 3/8" x 4 1/2" bolt through the backing plate and the seat pedestal.
- 4.** Place the seat adapter over the bolts and finish with the supplied 3/8" nyloc nuts.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.