





SEAT ADAPTER KIT #88137 INSTALLATION INSTRUCTIONS



3760-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

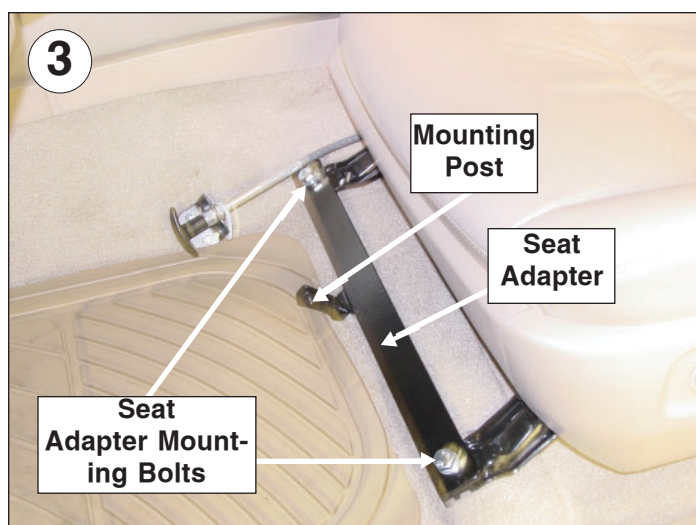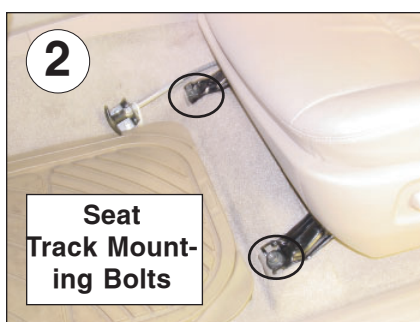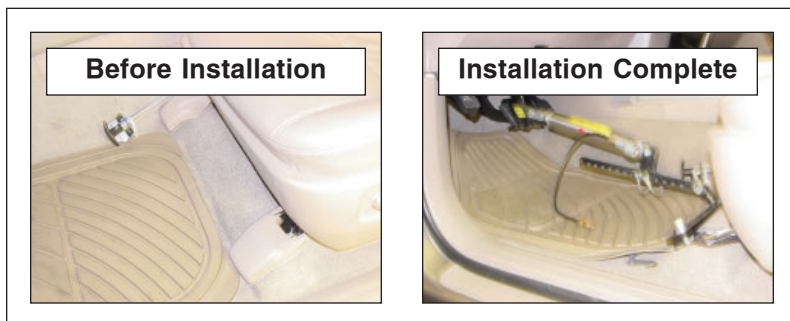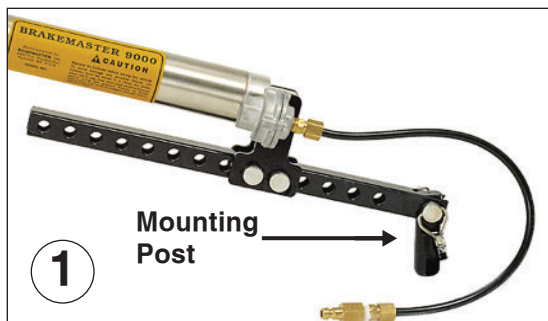

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 40mm
- (2) 10mm flat washer
- (2) 10mm lock washer

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Start by remove the two plastic seat track covers. Then, remove the two 14mm (head) seat track mounting bolts.
- 3.** Now, place the seat adapter over the holes you removed the 14mm (head) bolts from. Using the supplied 10mm x 1.25 x 40mm bolts, lock washers and flat washers, bolt through the holes in the adapter and into the holes in the floor. Note: the plastic seat track covers will not be replaced.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.