



1-800-669-9690





# SEAT ADAPTOR KIT #88137 INSTALLATION INSTRUCTIONS



3760-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

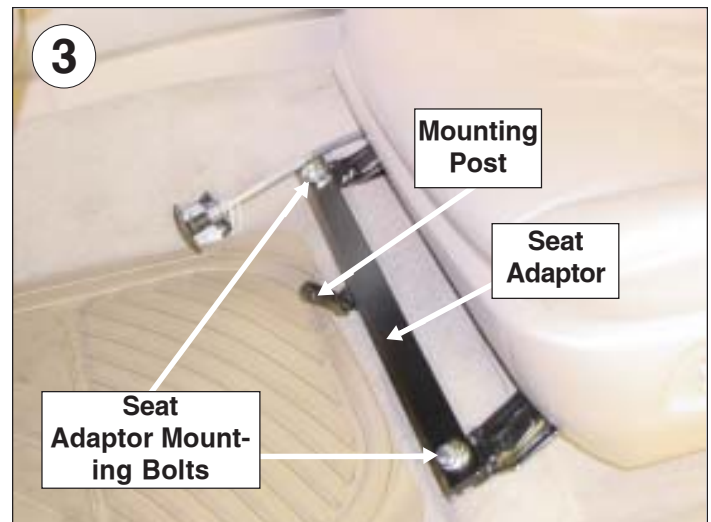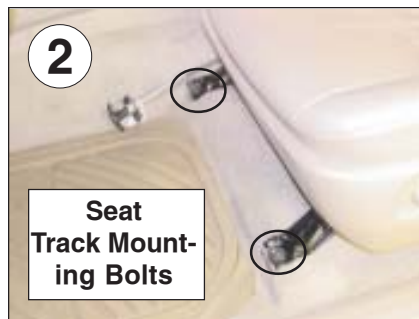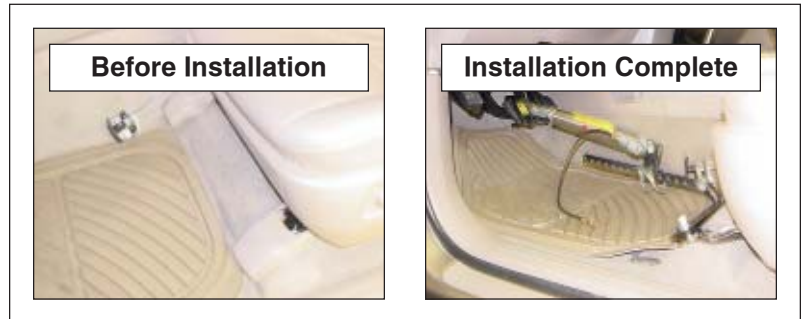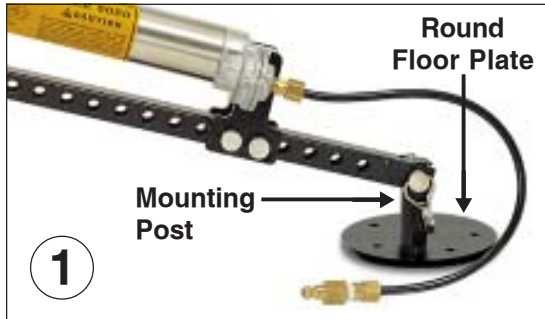

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 40mm
- (2) 10mm flat washer
- (2) 10mm lock washer

## Instructions

- 1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
- 2.** Start by remove the two plastic seat track covers. Then, remove the two 14mm (head) seat track mounting bolts.
- 3.** Now, place the seat adaptor over the holes you removed the 14mm (head) bolts from. Using the supplied 10mm x 1.25 x 40mm bolts, lock washers and flat washers, bolt through the holes in the adaptor and into the holes in the floor. Note: the plastic seat track covers will not be replaced.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.