

ROADMASTER, Inc.


SEAT ADAPTER KIT #88139 INSTALLATION INSTRUCTIONS



3780-03


ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407

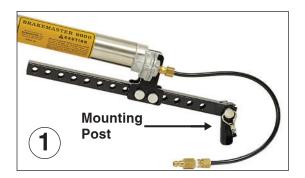





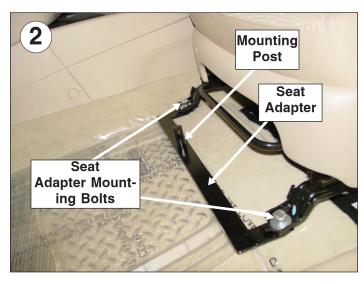



fax 360-735-9300

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 35mm
- (2) 10mm fender washer
- (2) 10mm lock washer
- (1) Allen head bolt

Instructions

- 1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- **2.** Remove the seat track covers and the two front 14mm (head) seat track mounting bolts. Place the seat adapter between the floor and the seat tracks. Bolt into place using the supplied 10mm \times 1.25 \times 35mm bolts, fender washers and lock washers.
- 3. The seat track covers can be replaced or left off.

