



1-800-669-9690



# SEAT ADAPTOR KIT #88140 INSTALLATION INSTRUCTIONS



3798-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

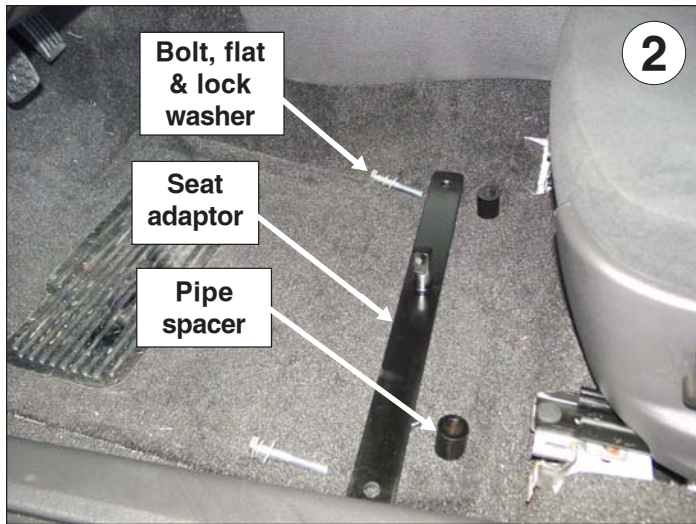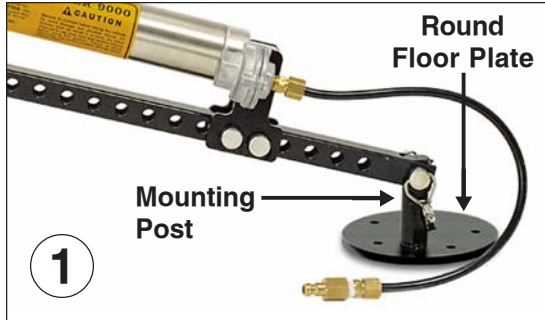

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the plastic seat track covers (they will not be replaced). Then, remove the 13mm (head) factory seat track mounting bolts. Using the supplied 10mm x 1.25 x 60mm bolts, flat washers, lock washers and the 1" x 1-1/8" wall pipe spacers, bolt the seat adaptor into the weld nuts you removed the factory bolts from. *Note:* 2006 Ford Fusion models use the two supplied 10mm x 1.5 x 60mm bolts. *Note:* place the wall pipe spacers between the seat track mounting holes and the seat adaptor.

## Parts List

- (2) 10mm x 1.25mm x 60mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1 x 1-1/8" x .219 wall pipe spacer
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer

For 2006 Ford Fusion:  
 (2) 10mm x 1.5 x 60mm bolts



### WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.