



1-800-669-9690




# SEAT ADAPTOR KIT #88144 INSTALLATION INSTRUCTIONS



2920-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

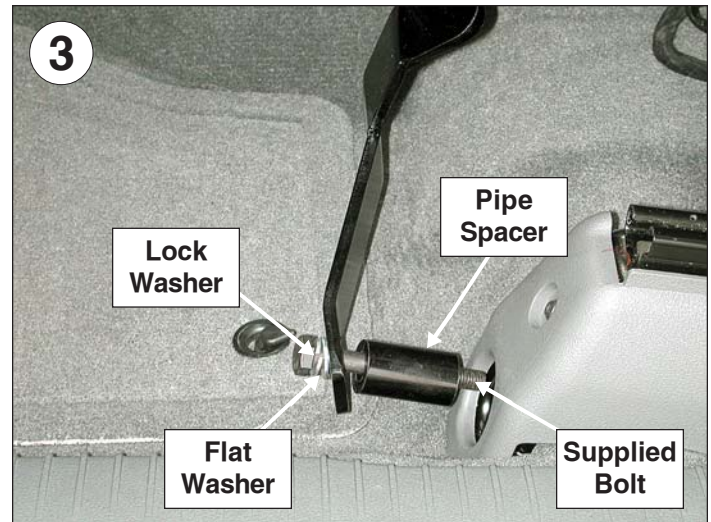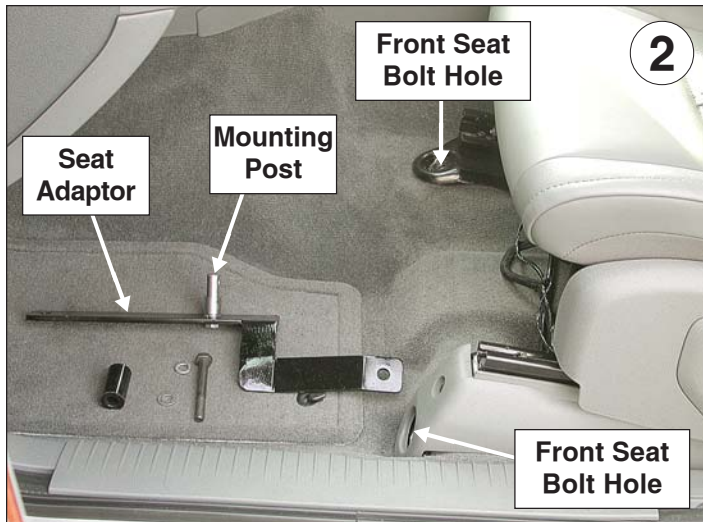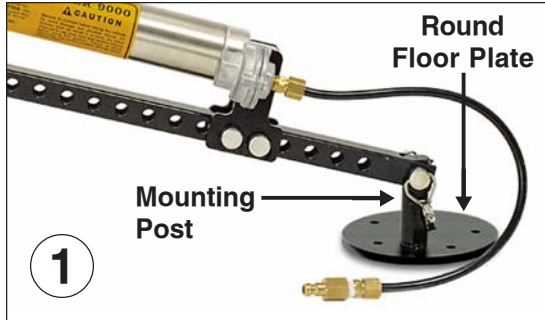

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig. 1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/4" x 3/8" bolt and 3/8" lock washer.
2. Remove the two 15mm (head) front seat bolts (Fig.2). Slide the seat adaptor under the front seat bolt holes. To secure the seat adaptor, use the stock bolt on the passenger side; on the driver's side, use the supplied 10mm x 1.5 x 75mm bolt, 1" x 1 3/4" pipe spacer, 10mm lock washer and flat washer (Fig.3)
3. Tighten the two bolts to secure the seat adaptor in place as shown in the "Installation Complete" photo above.

## Parts List

- (1) 3/4" x 3/8" bolt
- (1) 3/8" lock washer
- (1) 10mm x 1.5 x 75mm bolt
- (1) 10mm flat washer
- (1) 10mm lock washer
- (1) 1" x 1 3/4" pipe spacer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.