




SEAT ADAPTER KIT #88144 INSTALLATION INSTRUCTIONS



2920-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

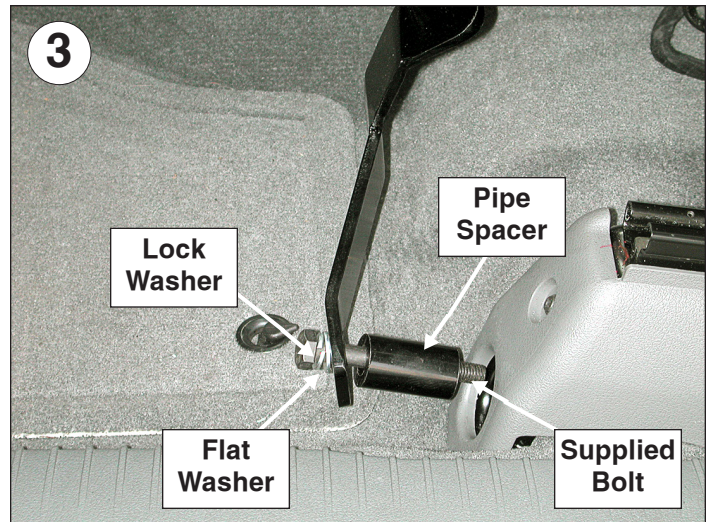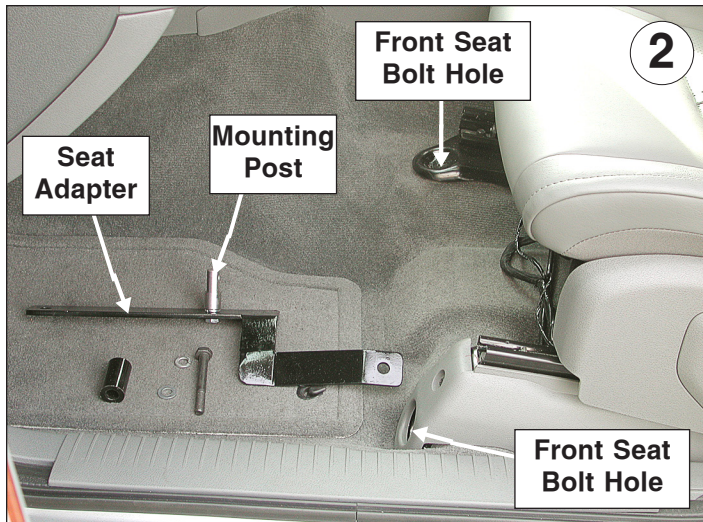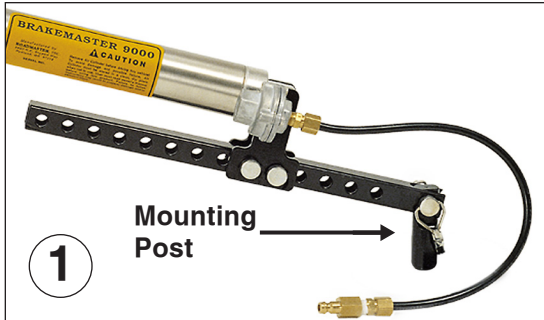

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the two 15mm (head) front seat bolts (Fig.2). Slide the seat adapter under the front seat bolt holes. To secure the seat adapter, use the stock bolt on the passenger side; on the driver's side, use the supplied 10mm x 1.5 x 75mm bolt, 1" x 1 3/4" pipe spacer, 10mm lock washer and flat washer (Fig.3).

3. Tighten the two bolts to secure the seat adapter in place as shown in the "Installation Complete" photo above.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (1) 10mm x 1.5 x 75mm bolt
- (1) 10mm flat washer
- (1) 10mm lock washer
- (1) 1" x 1 3/4" pipe spacer



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.