



SEAT ADAPTER KIT #88145 INSTALLATION INSTRUCTIONS



2915-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

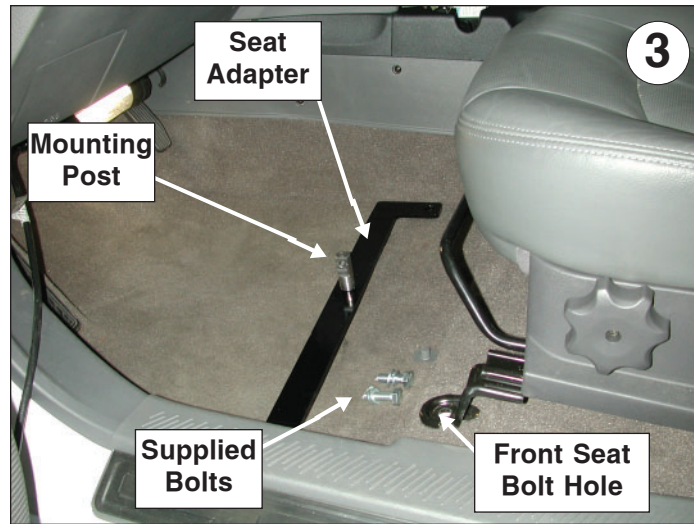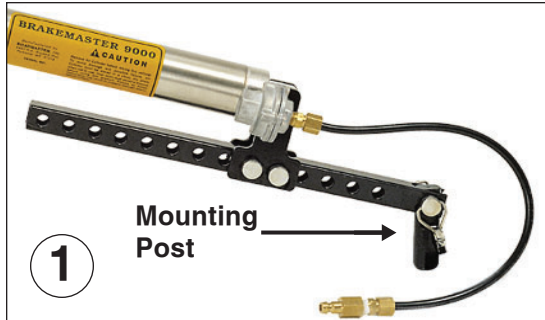

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Snap off the plastic bolt covers (Fig. 2, one on each side), and remove the two front 14mm head seat bolts underneath.
- 3.** Slide the seat adapter over the front seat bolt holes (Fig.3), and use the supplied 10mm x 1.25 x 35mm bolts, flat washers, and lock washers to secure it in place as shown in the "Installation Complete" photo above.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.