



1-800-669-9690



# SEAT ADAPTOR KIT #88145 INSTALLATION INSTRUCTIONS



2915-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

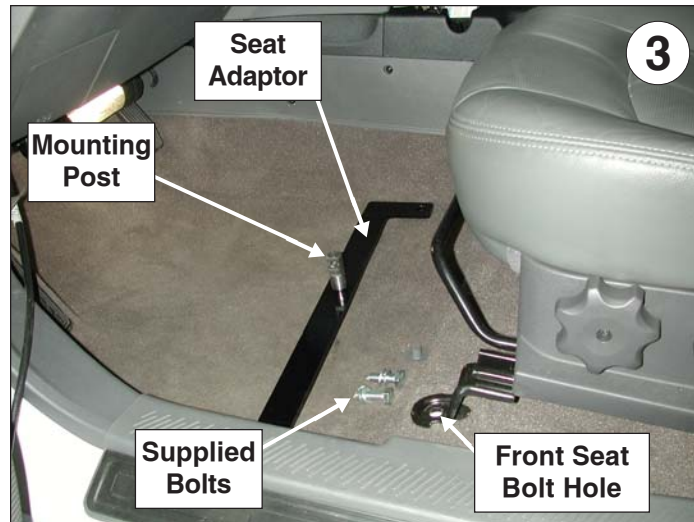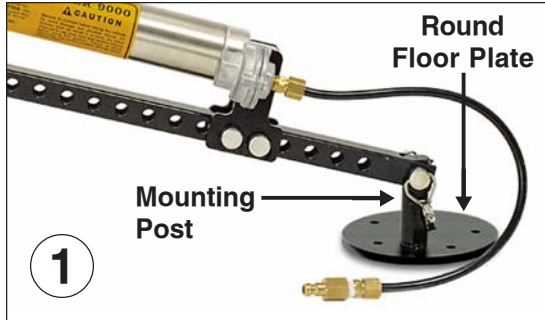

## Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig. 1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Snap off the plastic bolt covers (Fig. 2, one on each side), and remove the two front 14mm head seat bolts underneath.
3. Slide the seat adaptor over the front seat bolt holes (Fig. 3), and use the supplied 10mm x 1.25 x 35mm bolts, flat washers, and lock washers to secure it in place as shown in the "Installation Complete" photo above.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.