


# SEAT ADAPTER KIT #88147 INSTALLATION INSTRUCTIONS



2864-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

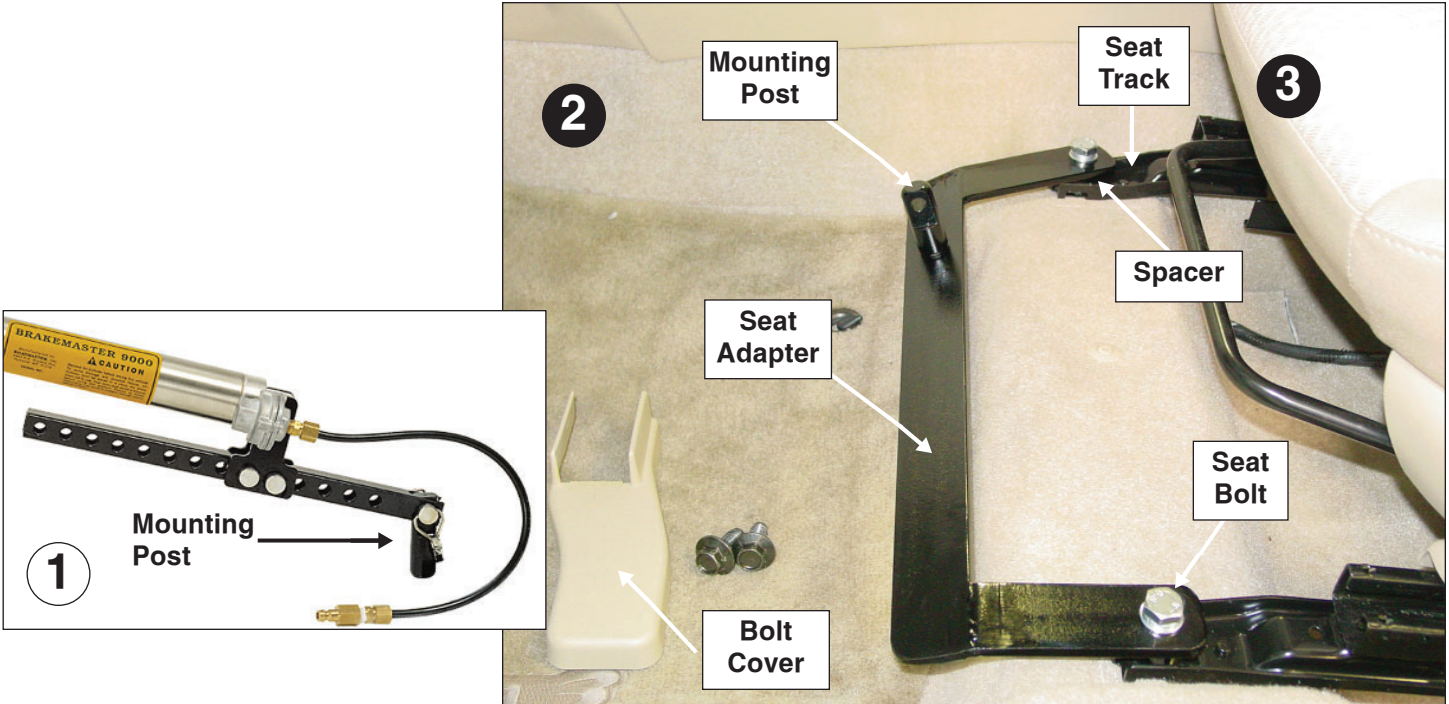

## Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 45mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1" x 5/8" spacers

## Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Then, secure the mounting post to the seat adapter, using the included 3/8" x 3/4" bolt and 3/8" lock washer. Remove the bolt covers and the seat bolts that secure the front of the seat tracks.
- 3.** Insert the spacers into the seat tracks and secure the seat adapter as shown, using the supplied bolts, flat washers and lock washers.



## WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.