


SEAT ADAPTOR KIT #88149 INSTALLATION INSTRUCTIONS



2891-01



ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

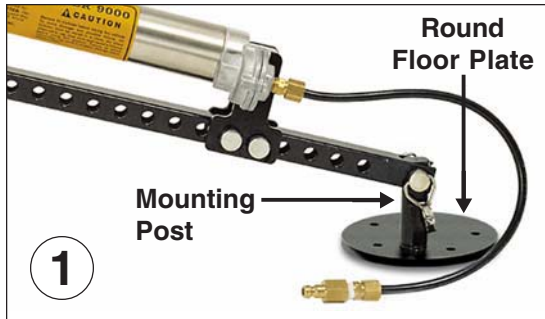

Parts List

- | | |
|-----------------------------|--------------------------|
| (1) 3/8" lock washer | (2) 12mm flat washers |
| (1) 12mm x 1.75 x 70mm bolt | (2) 12mm lock washers |
| (1) 12mm x 1.75 x 60mm bolt | (1) 1" x 1" pipe spacer |
| | (1) 1" x 1½" pipe spacer |

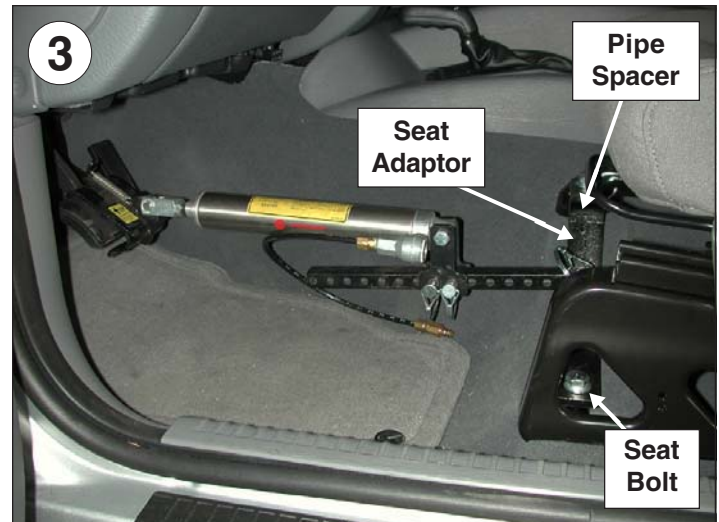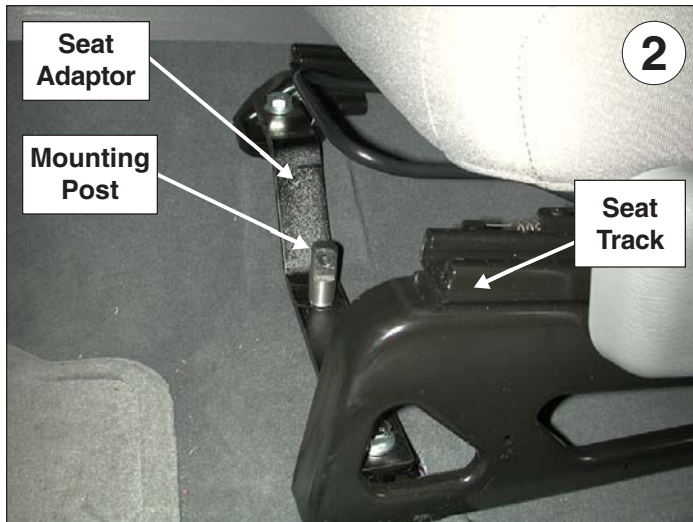

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a ½" open-end wrench to twist the mounting post off.
2. Then, secure the mounting post to the center of the seat adaptor using the tapered bolt you removed from the round plate, as well as the 3/8" lock washer. Remove the two factory-installed seat bolts that secure the seat to the seat tracks.
3. Place the 1" x 1½" pipe spacer between the driver's side seat track and seat adaptor and bolt it into place using the 12mm x 1.75 x 70mm bolt, 12mm flat washer and 12mm lock washer. Place the 1" x 1" pipe spacer between the passenger side seat track and seat adaptor and bolt it into place with the 12mm x 1.75 x 60mm bolt, 12mm flat washer and 12mm lock washer.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.