


SEAT ADAPTER KIT #88149 INSTALLATION INSTRUCTIONS



2891-03


ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

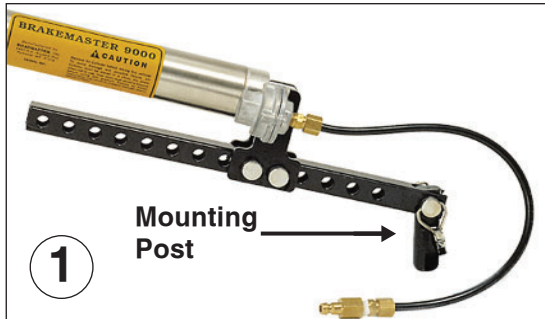

Parts List

- | | |
|-----------------------------|--------------------------|
| (1) 3/8" lock washer | (2) 12mm flat washers |
| (1) 12mm x 1.75 x 70mm bolt | (2) 12mm lock washers |
| (1) 12mm x 1.75 x 60mm bolt | (1) 1" x 1" pipe spacer |
| (1) Allen head bolt | (1) 1" x 1½" pipe spacer |

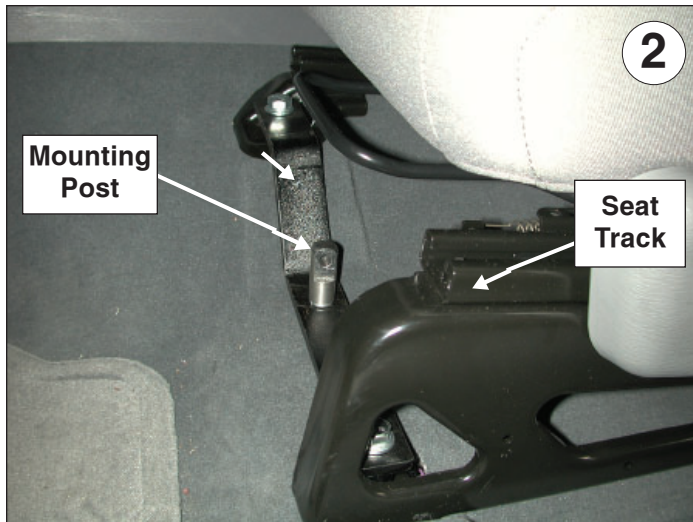

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Then, secure the mounting post to the center of the seat adapter using the tapered bolt you removed from the round plate, as well as the 3/8" lock washer. Remove the two factory installed seat bolts that secure the seat to the seat tracks.
3. Place the 1" x 1½" pipe spacer between the driver's side seat track and seat adapter and bolt it into place using the 12mm x 1.75 x 70mm bolt, 12mm flat washer and 12mm lock washer. Place the 1" x 1" pipe spacer between the passenger side seat track and seat adapter and bolt it into place with the 12mm x 1.75 x 60mm bolt, 12mm flat washer and 12mm lock washer.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.