




# SEAT ADAPTER KIT #88151 INSTALLATION INSTRUCTIONS



2889-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

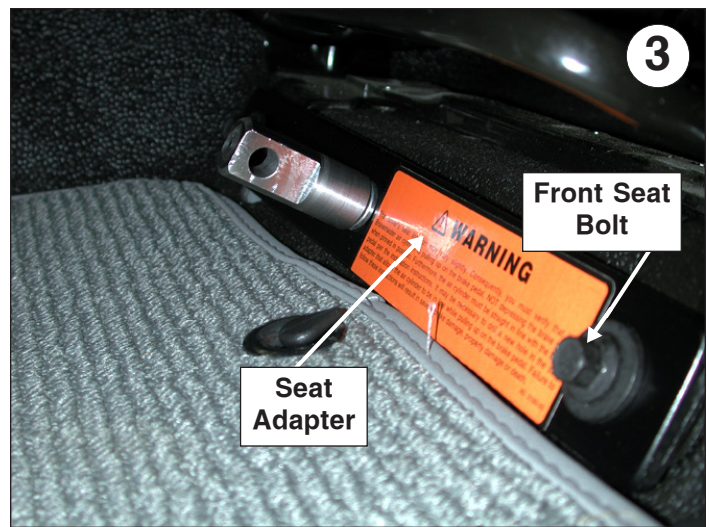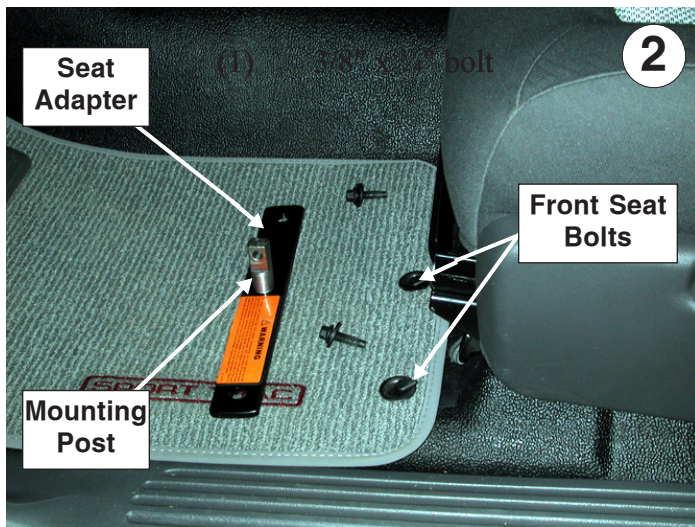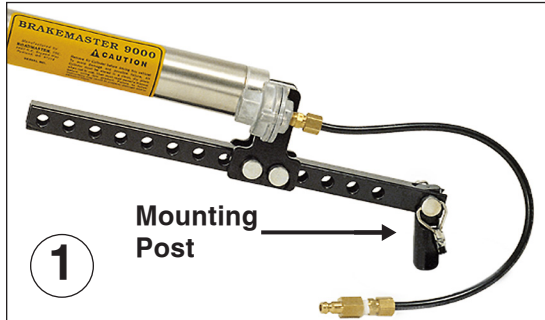

## Parts List

- (1) 3/8" Lock washer
- (1) 3/8" x 3/4" bolt

## Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Then, secure the mounting post to the center of the seat adapter, using the included 3/4" x 3/8" bolt and 3/8" lock washer. Remove the two 10mm front seat bolts.
3. Set the seat adapter over the front seat bolt holes and reinstall the 10mm front seat bolts. Tighten.



## WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.