




# SEAT ADAPTER KIT #88160 INSTALLATION INSTRUCTIONS



3465-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

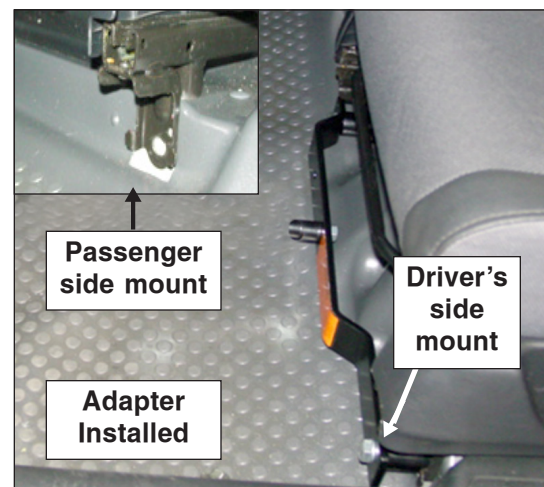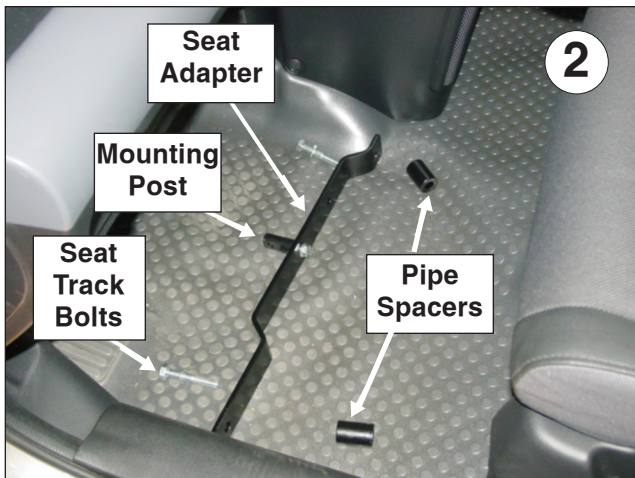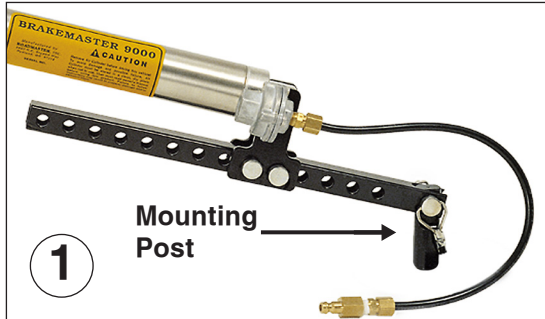

## Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Place the 1" x 1 1/2" x .219 wall pipe spacers over the driver's and passenger side mounting points. Next, place the seat adapter over the pipe spacers and bolt into place using the supplied 12mm x 1.25 x 60mm bolts and 10mm lock washers.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 1" x 1 1/2" x .219 wall pipe spacer
- (2) 12mm x 1.25 x 60mm bolt
- (2) 12mm lock washers



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.