




# SEAT ADAPTOR KIT #88160 INSTALLATION INSTRUCTIONS



3465-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

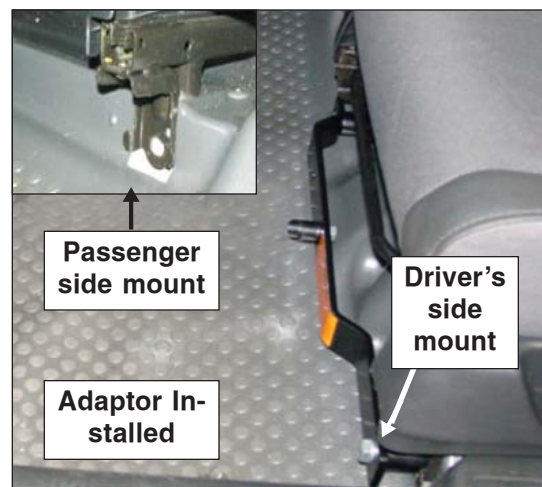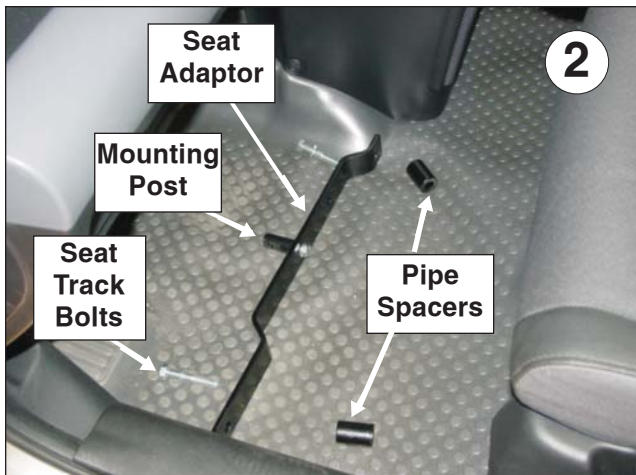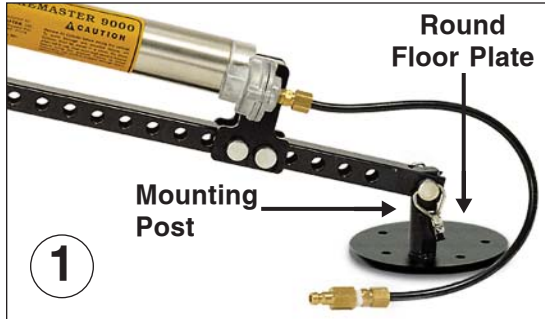

## Parts List

- (3) 3/8" lock washers
- (1) 3/8" x 3/4" bolt
- (2) 1" x 1 1/2" x .219 wall pipe spacer
- (2) 10mm x 1.25 x 60mm bolt
- (2) 10mm lock washers

## Instructions

**1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the seat adaptor. Bolt the mounting post to the seat adaptor with the included 3/8" x 3/4" bolt and 3/8" lock washer.

**2.** Place the 1" x 1 1/2" x .219 wall pipe spacers over the driver's and passenger side mounting points. Next, place the seat adaptor over the pipe spacers and bolt into place using the supplied 10mm x 1.25 x 60mm bolts and 10mm lock washers.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.