

R 1-800-669-9690 ROADMASTE SEAT Adapter KIT #88175 INSTALLATION INSTRUCTIONS ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



ROADMASTER, Inc.

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

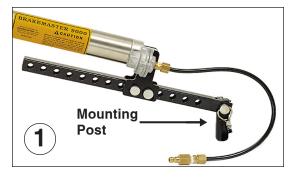

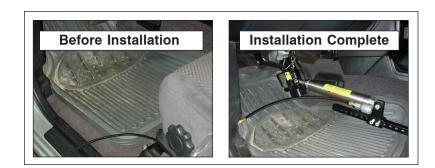

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove two 14mm head seat track bolts (Fig.2).

3. Place the seat adapter over the seat tracks. *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Bolt the seat adapter into place using the two supplied 10mm x 1.25 x 45mm bolts, lock washers and flat washers (Fig.3).

4. Attach the air cylinder to the seat adapter.

Parts List

(1) 3/8" lock washer (1) 3/8" x ³/₄" bolt

- (2) 10mm x 1.25 x 45mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers



