





SEAT ADAPTER KIT #88189 INSTALLATION INSTRUCTIONS



2928-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

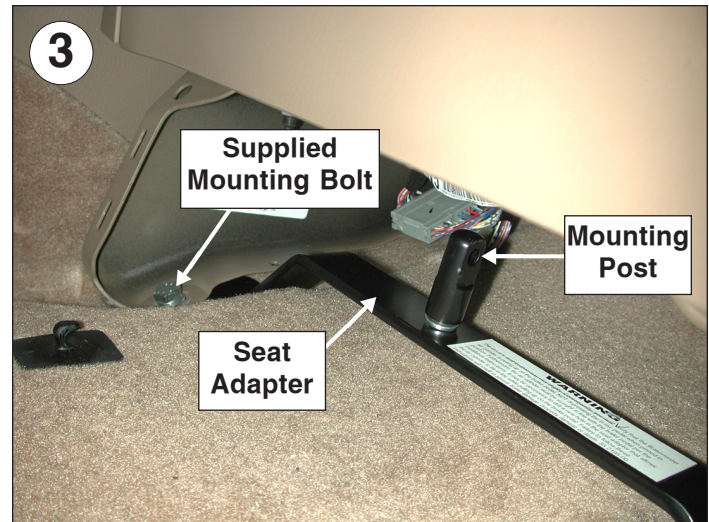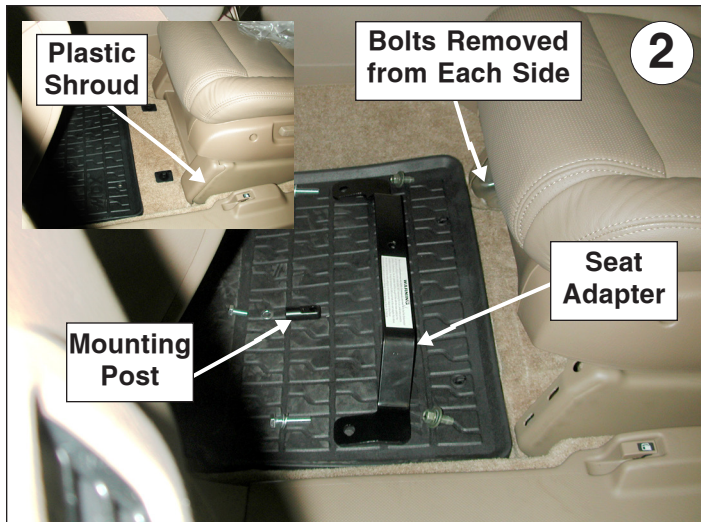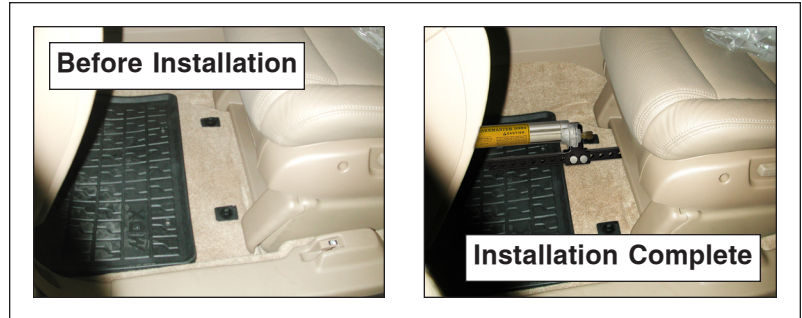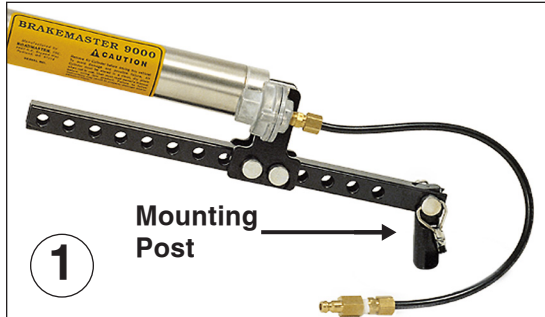

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the plastic shrouding at the bottom of the seat (inset, Fig.2) by pulling on each side until it snaps off. Remove the two 12mm bolts at the front and to each side of the driver's seat. Lift the front of the driver's seat up, and slide the seat adapter under the seat and over the front seat bolt holes.

3. To secure the seat adapter, bolt it in place with the supplied 10mm x 1.25 x 40mm bolt, 10mm lock washer and 10mm flat washer on each side. Tighten the two bolts. Snap the front shroud back in place.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.