



1-800-669-9690




SEAT ADAPTOR KIT #88189 INSTALLATION INSTRUCTIONS



2928-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

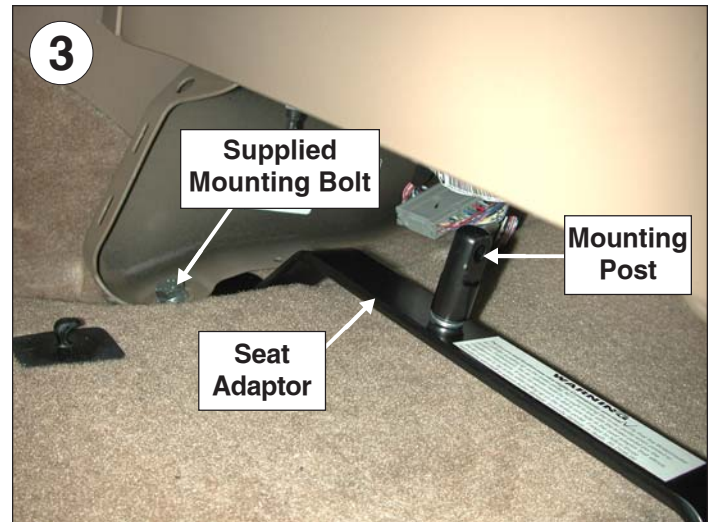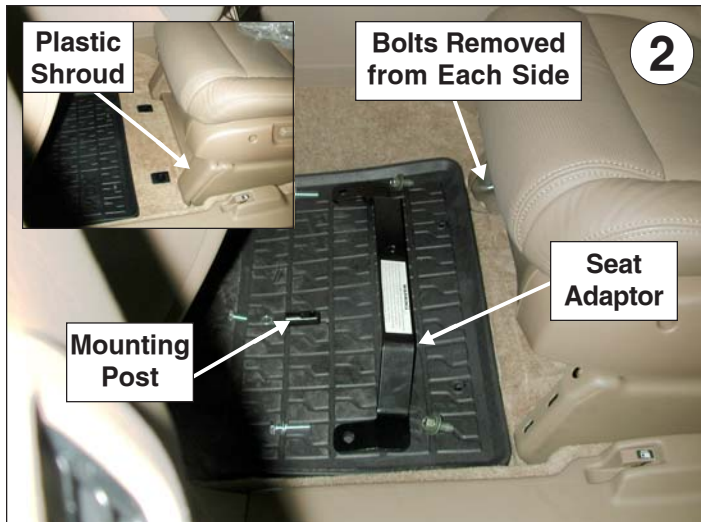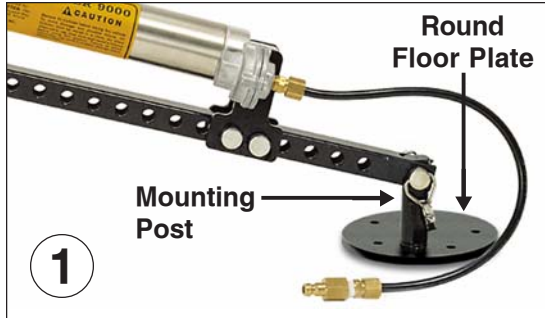

Instructions

- 1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
- 2.** Remove the plastic shrouding at the bottom of the seat (inset, Fig.2) by pulling on each side until it snaps off. Remove the two 12mm bolts at the front and to each side of the driver's seat. Lift the front of the driver's seat up, and slide the seat adaptor under the seat and over the front seat bolt holes.
- 3.** To secure the seat adaptor, bolt it in place with the supplied 10mm x 1.25 x 40mm bolt, 10mm lock washer and 10mm flat washer on each side. Tighten the two bolts. Snap the front shroud back in place.

Parts List

- (1) 3/8" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.