




# SEAT ADAPTOR KIT #88192 INSTALLATION INSTRUCTIONS



3027-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

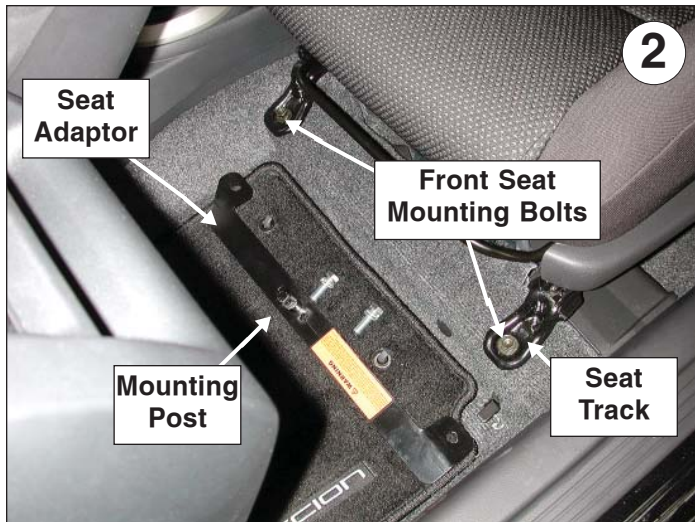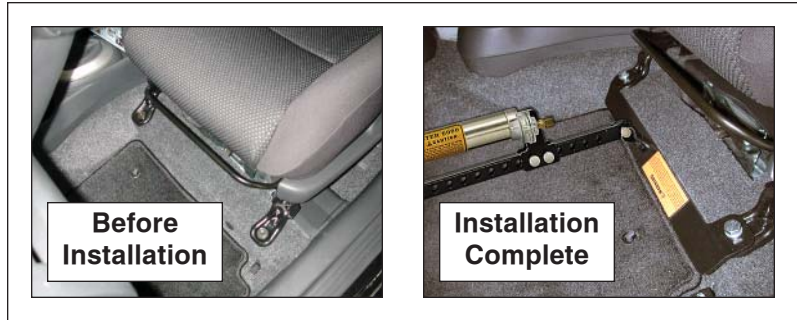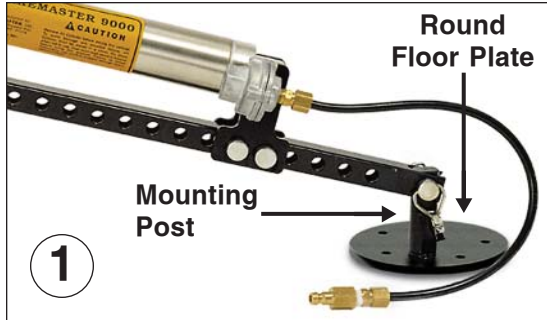

## Parts List

### for Scion models--

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

### for Chrysler models -

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 8mm x 1.25 x 45mm bolts
- (2) 8mm lock washers
- (2) 8mm fender washers
- (2) 1" x 5/16" pipe spacers

## Instructions

**1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. This kit fits a number of vehicles. There are three holes along the shank of the seat adaptor for the mounting post. Position the seat adaptor over the seat tracks and choose the hole which is in a direct line to the vehicle's brake pedal. Then, secure the mounting post to the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

**2.** On each side, remove the 14mm front seat mounting bolts. **For Scion models:** Align the seat adaptor over the seat tracks and over the holes for the front seat mounting bolts you just removed. Check the alignment of the mounting post to make sure it is in a direct line to the brake pedal. Bolt the seat adaptor into place with the supplied 10mm x 1.25 x 35mm bolts, flat washers and lock washers. **For Chrysler models:** Position the pipe spacers over the seat track bolt holes, then set the seat adaptor over the pipe spacers. Check the alignment of the mounting post to make sure it is in a direct line to the brake pedal. Bolt the seat adaptor into place with the supplied 8mm x 1.25 x 45mm bolts, lock washers and fender washers.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.