



SEAT ADAPTER KIT #88192 INSTALLATION INSTRUCTIONS



3027-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

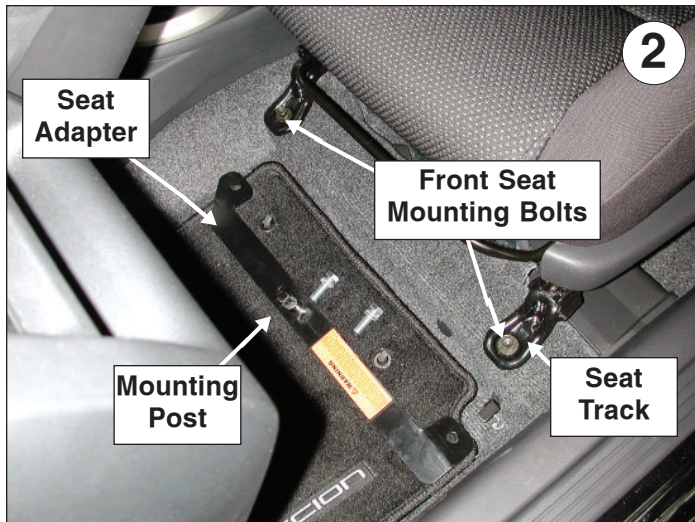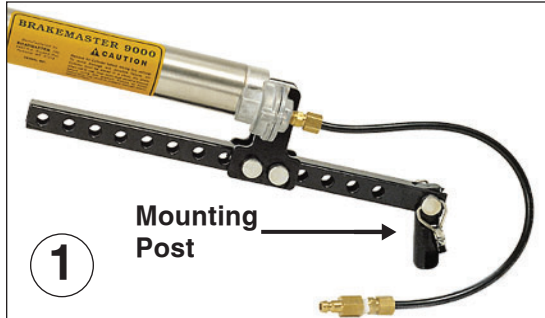

Parts List

for Scion models--

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers

for Chrysler models -

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 8mm x 1.25 x 45mm bolts
- (2) 8mm lock washers
- (2) 8mm fender washers
- (2) 1" x 5/16" pipe spacers

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** On each side, remove the 14mm front seat mounting bolts. **For Scion models:** Align the seat adapter over the seat tracks and over the holes for the front seat mounting bolts you just removed. Check the alignment of the mounting post to make sure it is in a direct line to the brake pedal. Bolt the seat adapter into place with the supplied 10mm x 1.25 x 35mm bolts, flat washers and lock washers. **For Chrysler models:** Position the pipe spacers over the seat track bolt holes, then set the seat adapter over the pipe spacers. Check the alignment of the mounting post to make sure it is in a direct line to the brake pedal. Bolt the seat adapter into place with the supplied 8mm x 1.25 x 45mm bolts, lock washers and fender washers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.