



1-800-669-9690

SEAT ADAPTOR KIT #88196 INSTALLATION INSTRUCTIONS



3636-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE




ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

1-800-669-9690

www.roadmasterinc.com

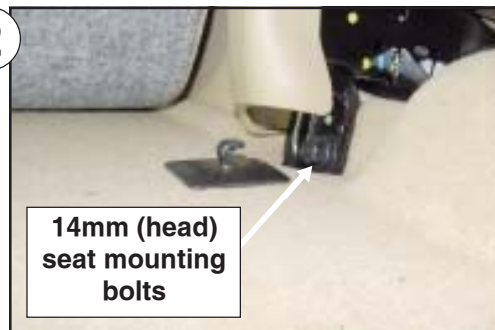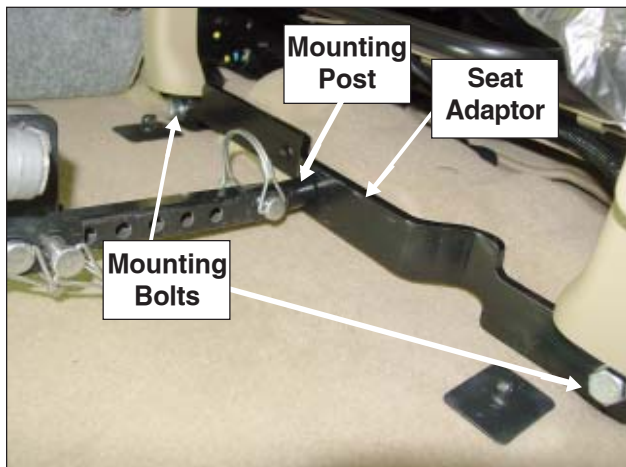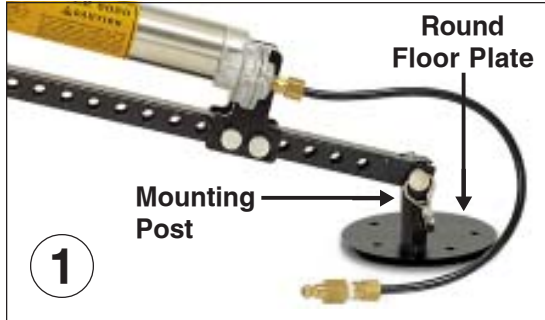

- ### Parts List
- (2) 10mm x 1.25 x 50mm bolts
 - (2) 10mm lock washers
 - (2) 10mm flat washers
 - (2) 1" x 3/4" pipe spacers
 - (1) 3/8" x 3/4" bolt
 - (2) 3/8" lock washer

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the seat adaptor. Bolt the mounting post to the seat adaptor with the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Start by removing the two 14mm (head) seat mounting bolts, located behind the plastic covers. Now, place the 1" x 3/4" spacers over the holes you removed the 14mm (head) bolts from. Set the seat adaptor over the spacers and bolt into place using the supplied 10mm x 1.25 x 50mm bolts, flat washers and lock washers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.