





# SEAT ADAPTOR KIT #88197 INSTALLATION INSTRUCTIONS



3563-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

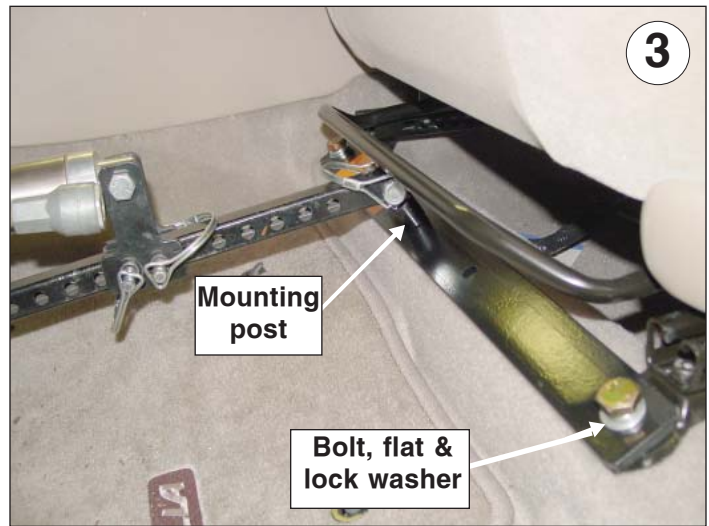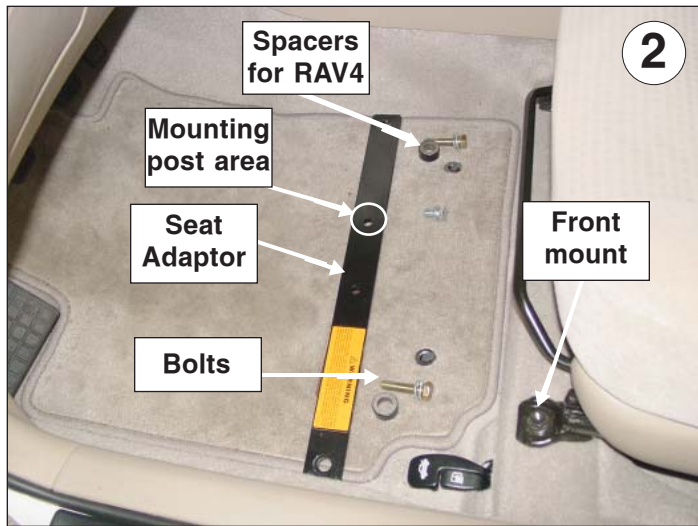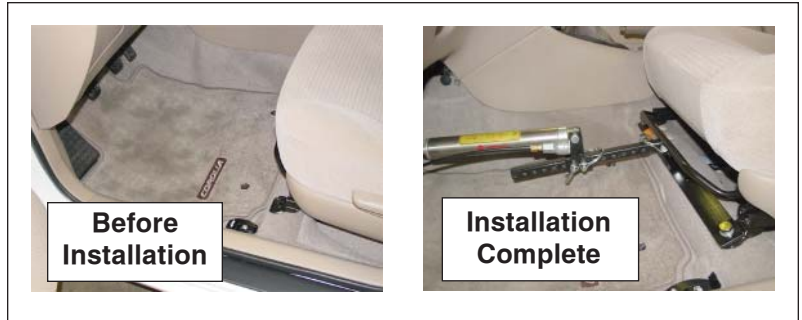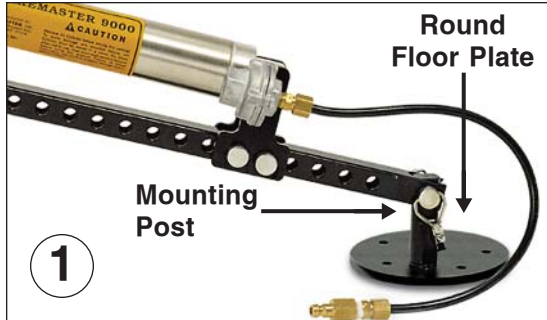

**1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off.

**2.** Then, secure the mounting post to the appropriate hole that aligns with the brake pedal, using the included 3/8" x 3/4" bolt and 3/8" lock washer. Next, remove the two factory 14mm seat track bolts. Place the seat adaptor over the existing seat track front mounting holes. (**Note:** for the RAV4 you will need to use the spacers. Place the spacers over the seat track mounts, then place the seat adaptor over the spacers. You will not be using the spacers for the Corolla). Run one 10mm x 1.25 x 45mm bolt, flat washer and lock washer through each side of the seat adaptor and then through the seat support.

- ## Parts List
- (1) 3/8" lock washers
  - (1) 3/8" x 3/4" bolt
  - (2) 10mm x 1.25 x 45mm bolt
  - (2) 10mm lock washer
  - (2) 10mm flat washer
  - (2) 1" rd. x 1/2" x .188 wall spacers