


## SEAT ADAPTER KIT #88197 INSTALLATION INSTRUCTIONS



3563-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE


ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300

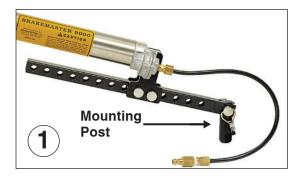






www.roadmasterinc.com

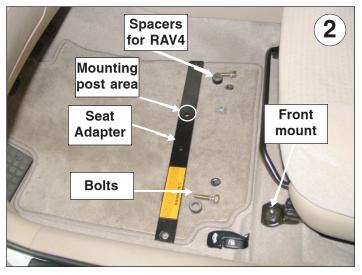

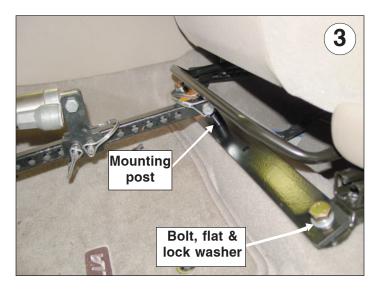

- **1.** Locate the mounting post (Fig.1) that came with your Brake-Master. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- **2.** Then, secure the mounting post to the appropriate hole that aligns with the brake pedal, using the included 3/8" x 3/4" bolt and 3/8" lock washer. Next, remove the two factory 14mm seat track bolts. Place the seat adapter over the existing seat track front mounting holes. (*Note*: for the RAV4 you will need to use the spacers. Place the spacers over the seat track mounts, then place the seat adapter over the spacers. You will not be using the spacers for the Corolla). Run one 10mm x 1.25 x 45mm bolt, flat washer and lock washer through each side of the seat adapter and then through the seat support.

## Parts List

- (1) 3/8" lock washers
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 45mm bolt
- (2) 10mm lock washer
- (2) 10mm flat washer
- (2) 1" rd. x ½" x .188 wall spacers

