




# SEAT ADAPTER KIT #88208 INSTALLATION INSTRUCTIONS



3779-07

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

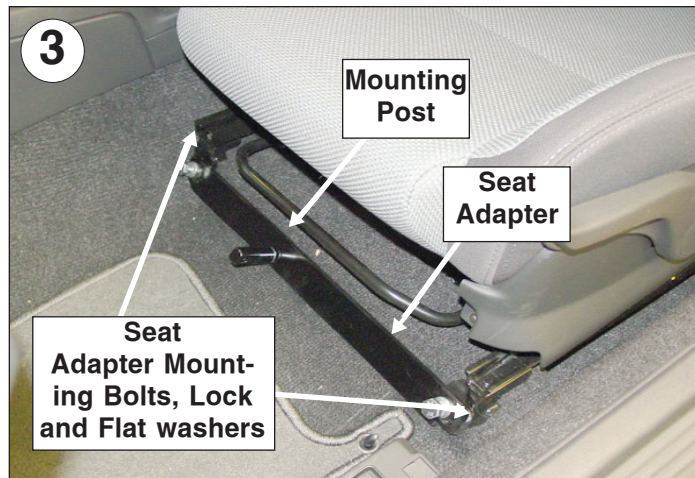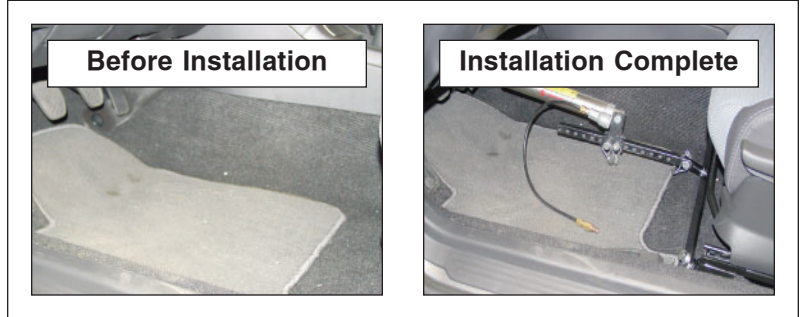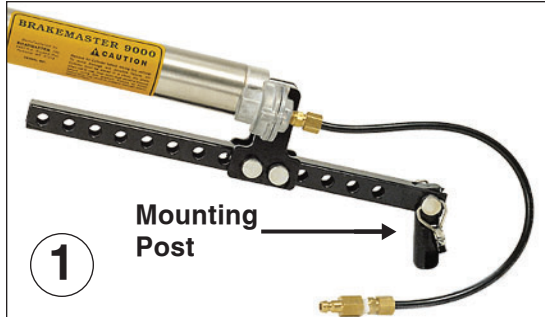

## Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove the factory seat track mounting bolts and place the 1" x 5/8" spacers over the holes. *Note:* due to manufacturing variances, some vehicles may have plastic seat track covers over the bolts. If this is the case, remove these covers first (Fig.2). Set the seat adapter bracket over the spacers and bolt into place with the supplied 10mm x 1.5 x 35mm bolts or 10mm x 1.25 x 45mm bolts, lock washers and flat washers.  
*Note:* verify the thread pitch with the factory bolts you removed to determine the correct bolts to use. Also, some older vehicles may not require the spacer. Figure 3 shows the completed installation.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.5 x 35mm
- (2) 10mm x 1.25 x 45mm
- (2) 10mm flat washer
- (2) 10mm lock washer
- (2) 1" x 5/8" spacer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.