




# SEAT ADAPTOR KIT #88208 INSTALLATION INSTRUCTIONS



3779-05

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

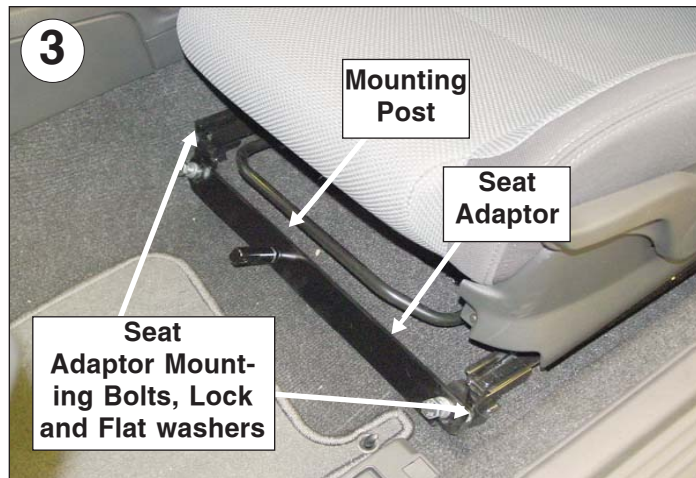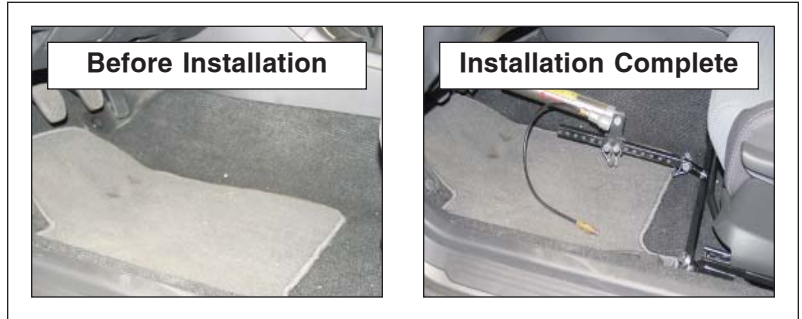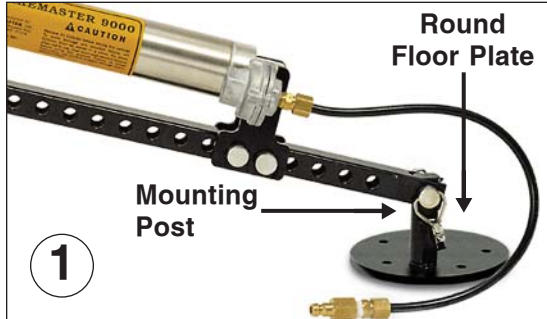

## Instructions

**1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

**2.** Remove the factory seat track mounting bolts and place the 1" x 5/8" spacers over the holes. *Note:* due to manufacturing variances, some vehicles may have plastic seat track covers over the bolts. If this is the case, remove these covers first (Fig.2). Set the seat adaptor bracket over the spacers and bolt into place with the supplied 10mm x 1.5 x 35mm bolts or 10mm x 1.25 x 45mm bolts, lock washers and flat washers.

*Note:* verify the thread pitch with the factory bolts you removed to determine the correct bolts to use. Also, some older vehicles may not require the spacer. Figure 3 shows the completed installation.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.5 x 35mm
- (2) 10mm x 1.25 x 45mm
- (2) 10mm flat washer
- (2) 10mm lock washer
- (2) 1" x 5/8" spacer