



1-800-669-9690





# SEAT ADAPTOR KIT #88215 INSTALLATION INSTRUCTIONS



2888-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

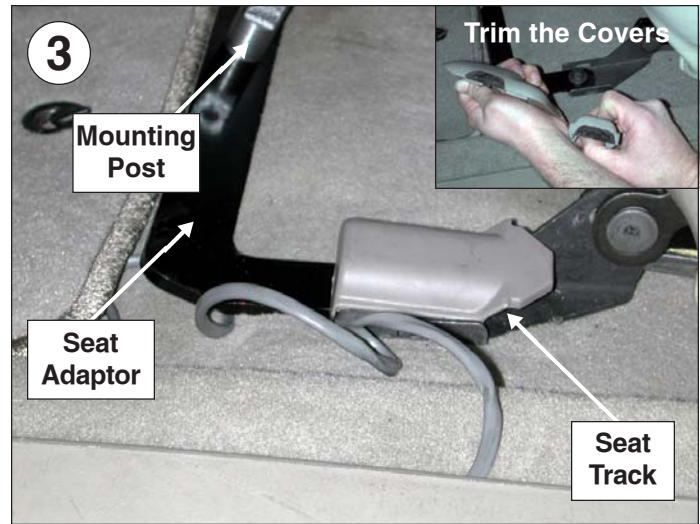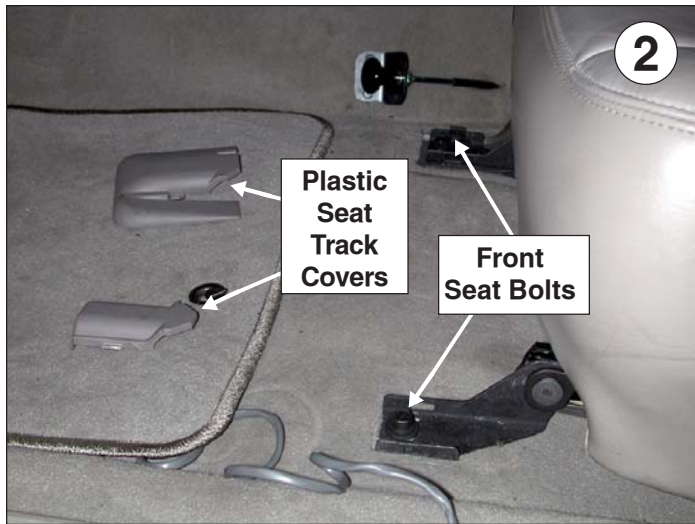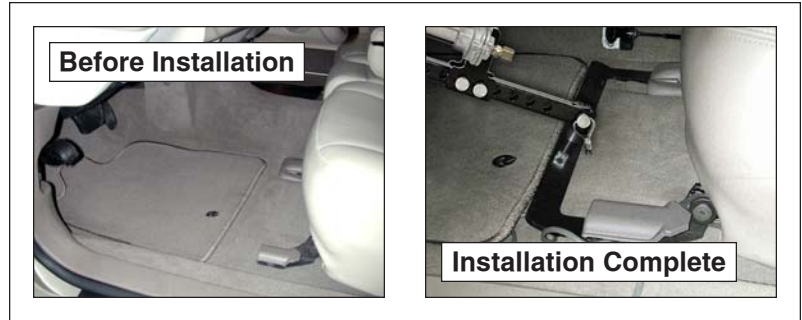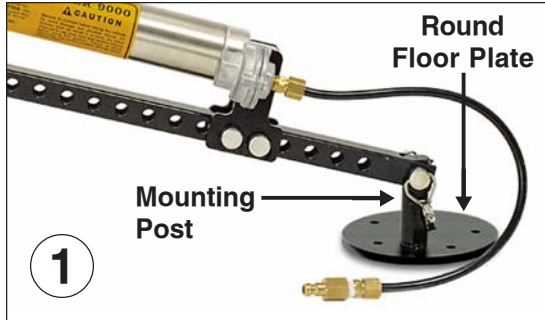

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Figure 1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. There are two holes in the shank of the seat adaptor, to fit a variety of vehicles. Check the alignment of the brake pedal to the seat adaptor, then choose the correct hole to align the mounting post to the brake pedal. Bolt the mounting post to the the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the plastic covers over each front seat track, then unscrew the two front seat bolts.
3. Slide the seat adaptor onto the seat track, over the front seat bolt holes. Then bolt the seat adaptor in place, using the factory bolts you removed in the previous step. Tighten the bolts.
4. Test-fit the plastic covers and trim the edges as necessary. (Use the black marks in the inset, Figure 3, as a reference.) Then, replace the covers.

*Note:* for some vehicles, the seat must be raised to the full upright position before adjusting it to the full forward position.

## Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.